

MXB RODLESS BELT DRIVE ACTUATORS

ENDURANCE TECHNOLOGYSM

A Tolomatic Design Principle

U UNGUIDED

S SOLID BEARING

P PROFILED RAIL



LINEAR SOLUTIONS MADE EASY

MXB Rodless Belt Drive Actuators

DESIGNED TO OUTLAST EVERY BELT DRIVE ACTUATOR ON THE MARKET



The MXB belt drive electric actuator is exactly what you would expect from the industry's number one rodless supplier. Designed with our exclusive **ENDURANCE TECHNOLOGY™** features, the MXB delivers superior performance to meet the most demanding applications. Nobody knows rodless like Tolomatic, and the MXB proves it.

- MXB-**U**, MXB-**S** & MXB-**P**: Low profile to fit your application
- MXB-**S**: Engineered bearing material in trapezoidal shape for less wear, low static & dynamic friction
- MXB-**P**: High precision bearings feature smooth, low breakaway motion
- MXB-**P**: Durable profiled rail design uses recirculating ball technology to reduce friction and extend actuator life.
- MXB-**P**: High load and bending moment capacities

TOLOMATIC'S ELECTRIC RODLESS BELT-DRIVE ACTUATORS


	MXB-U	MXB-S	MXB-P	B3W	TKB
					
Speed up to:	5,080 mm/sec (200 in/sec)	2,540 mm/sec (100 in/sec)	3,810 mm/sec (150 in/sec)	5,080 mm/sec (200 in/sec)	2,540 mm/sec (100 in/sec)
Stroke Length up to:	5,080 mm (200 in)	5,080 mm (200 in)	5,080 mm (200 in)	5,258 mm (207 in)	2,438 mm (96 in)
Load up to:	NA	236 kg; 2,313 N (520 lb)	586 kg; 5,745 N (1,292 lb)	911 kg; 8,932 N (2,008 lb)	340 kg; 8,932 N (750 lb)
Thrust up to:	1,859 N (418 lbf)	1,859 N (418 lbf)	1,859 N (418 lbf)	1,446 N (325 lbf)	1,090 N (245 lbf)
Literature Number:	8500-4000	8500-4000	8500-4000	3600-4609	2700-4000

(Not all models deliver maximum values listed, i.e.: Maximum thrust may not be available with maximum speed)


MXB Rodless Belt Drive Actuators

APPLICATIONS


X-Y Multi-Axis

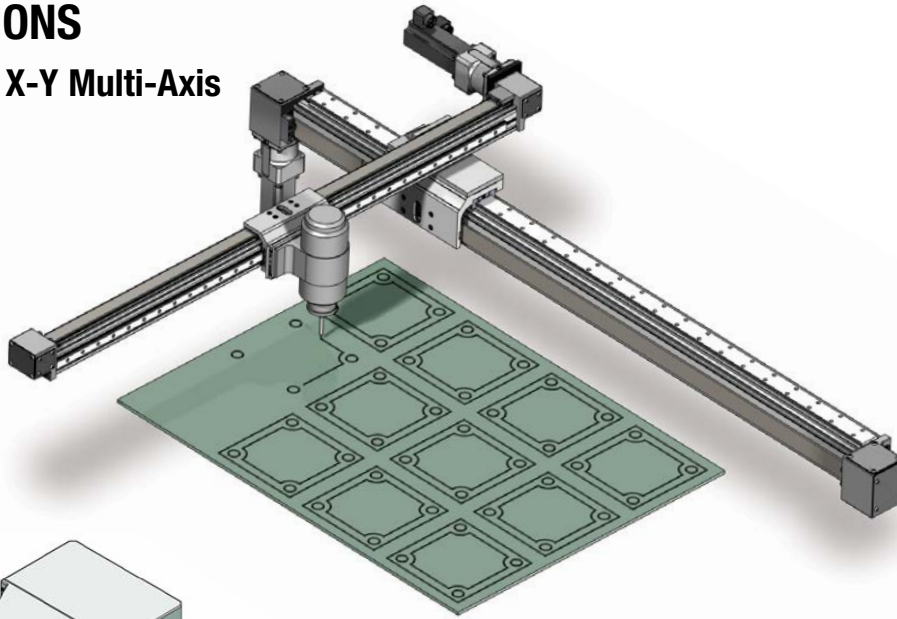

Workcenter Positioning

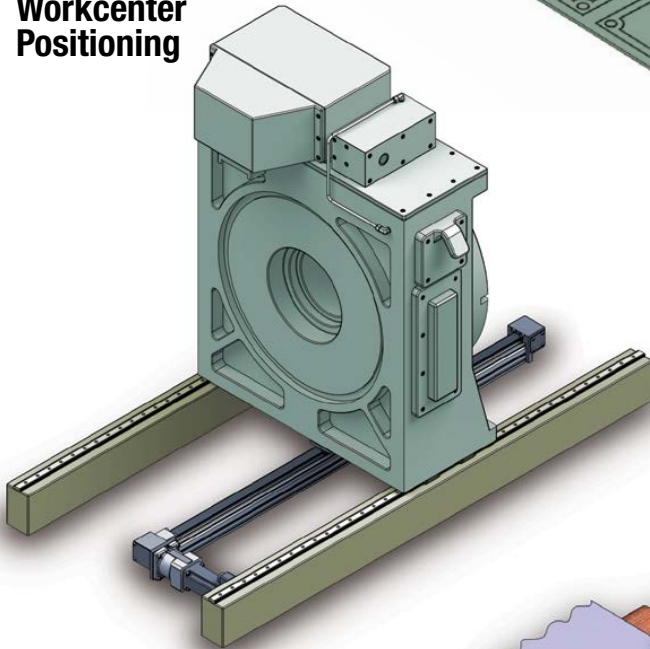

High Speed Flying Cut Off

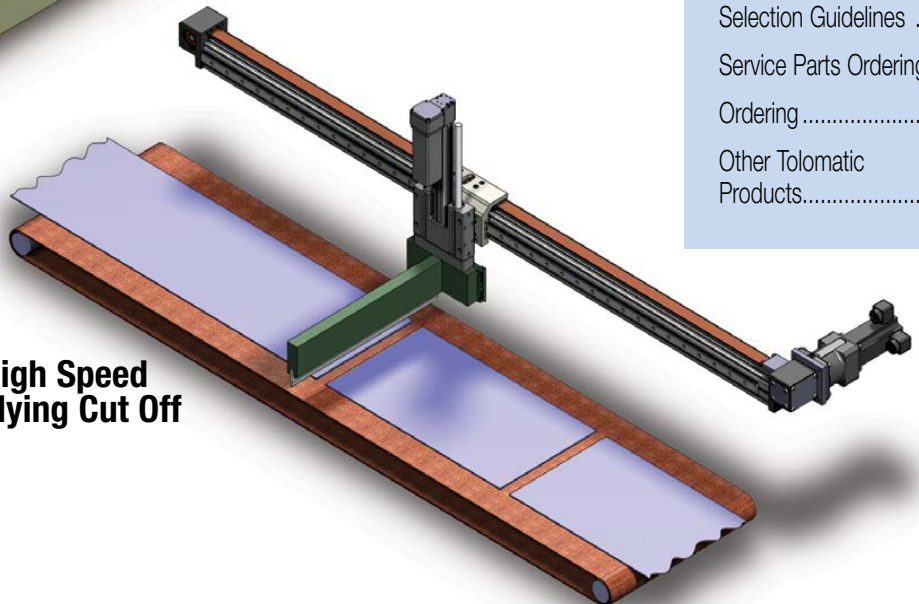

CONTENTS

MXB Belt Drive Actuator..	2
Applications.....	3
MXB-U Features.....	4
MXB-S Features	6
MXB-P Features	8
Specifications	10
MXB-U Actuator and Options Dimensions	15
MXB-S Actuator Dimensions.....	16
MXB-S Option Dimensions.....	17
MXB-P Actuator Dimensions.....	18
MXB-P Option Dimensions.....	19
Motor Mounting	20
Switches	22
Application Data Worksheet	24
Selection Guidelines	25
Service Parts Ordering...	26
Ordering	27
Other Tolomatic Products.....	28

- Adhesive dispensing
- Aligning
- Animation
- Assembly
- Automotive
- Camera positioning
- Conveyors
- Cutting
- Diverters
- Inspection
- Laser marking
- Material cutting
- Milling
- Packaging equipment
- Parts transfer
- Pick & place
- Positioning
- Product handling
- Pulp & Paper
- Slitting
- Sorting
- Spraying
- Stacking
- Table positioning
- Test stations
- Wire winding

MXB- UNGUIDED BELT-DRIVE ACTUATOR

ENDURANCE TECHNOLOGYSM

A Tolomatic Design Principle

Endurance TechnologySM features are designed for maximum durability to provide extended service life.

The MXB-U rodless actuator is a pre-assembled compact linear belt solution for use in applications with existing guides & supports. This economical actuator features speeds up to 5080 mm/sec (200 in/sec) and thrusts up to 1859 N (418 lbf). Built-to-order in stroke lengths up to 5842 mm (200 in).

MOTOR ORIENTATION

YOU CAN CHOOSE:

- Direct drive option directly couples motor to the drive shaft; one-piece housing construction for optimum alignment and support of the motor
- Reduction option in 3:1 reduction (2:1 on MXB16)

DURABLE BELT MATERIAL

High power polyurethane HTD tooth profile belt with steel tensile members resists stretching

YOUR MOTOR HERE

YOU CAN CHOOSE:


- Specify the device to be installed and actuator ships with proper mounting hardware
- Specify and ship your device to Tolomatic for factory installation
- Motor supplied and installed by Tolomatic

OVERSIZED PULLEY BEARINGS

Drive shaft assembly incorporates oversized shielded/sealed ball bearings for long life and high speeds

STEEL REINFORCED/HTD BELT PROFILE

- Belt of polyurethane material reinforced with steel tension members to produce high carrier thrusts without belt stretch.
- HTD tooth profile distributes tooth load more evenly and provides greater tooth shear strength, allowing for higher thrust loading.
- The deep teeth of the HTD profile are cogging-resistant, preventing potentially damaging positioning errors.

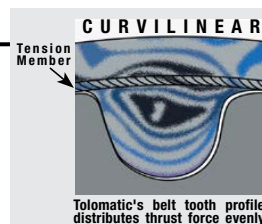

INCH OR METRIC MOUNTING

Your choice of blank, inch (US standard) or metric mounting to the plate

LOW PLATE HEIGHT

Reduces overall actuator envelope

EXTERNAL BUMPERS

Polyurethane bumpers protect the belt and clamp assembly from damage at end-of-stroke

BELT TENSIONING SYSTEM


The open slot on the guide plate permits easy access to the belt tensioning screw. No disassembly required

LIGHTWEIGHT ALUMINUM DESIGN

Clear anodized extrusion design is optimized for rigidity and strength

NOTE: Boxed letters indicate ordering codes

OPTIONS



MOUNTING PLATES **M****P**

- Provides clearance for motor and mount
- 16,25,32 sizes attach with T-Nuts
- 40,50,63 sizes attach with Tube Clamps



HEAD COVER PLATE **H****C****2**

- Provides protection for pulley and bearing



TUBE CLAMPS **T****C**

- Used for intermediate support
- Flush with bottom of actuator to retain low profile
- Drop-in, adjustable mounting locations (Not available on the MXB16U)



SWITCHES

- Wide variety of sensing choices: Reed, Solid State PNP or NPN, available normally open or normally closed
- Flush mount, drop-in installation
- Bright LEDs, power & signal indication
- CE rated, RoHS compliant

MXB-S SOLID BEARING BELT-DRIVE

ENDURANCE TECHNOLOGYSM

A Tolomatic Design Principle

Endurance TechnologySM features are designed for maximum durability to provide extended service life.

The MXB-S rodless style actuator is a compact linear belt solution for use in applications requiring light to moderate load carrying and guidance. The MXB-S actuator utilizes two field replaceable solid bearings that optimize stress distribution for optimal performance, rigidity and life. This economical actuator features speeds up to 2540 mm/sec (100 in/sec) and thrusts up to 1859 N (418 lbf). Built-to-order in stroke lengths up to 5080 mm (200 in).

LARGE FLEXIBLE MOUNTING PATTERN

- Carrier gives more load stability
- Directly compatible with existing BCS & BC2 applications
- More fastening options

BELT TENSIONING SYSTEM

The open slot on the guide plate permits easy access to the belt tensioning screw. No disassembly required

EXTERNAL BUMPERS

Polyurethane bumpers protect the belt and clamp assembly from damage at end-of-stroke

OVERSIZED PULLEY BEARINGS


Drive shaft assembly incorporates oversized shielded/sealed ball bearings for long life and high speeds

DURABLE BELT MATERIAL

High power polyurethane HTD tooth profile belt with steel tensile members resists stretching

TRAPEZOIDAL BEARINGS

- Trapezoidal design maximizes bearing surface area for less pressure on bearing surfaces; less pressure results in less wear
- Engineered bearing material has low static and dynamic friction with low wear properties for long lasting, smooth operation
- Bearings are field replaceable for extended service life

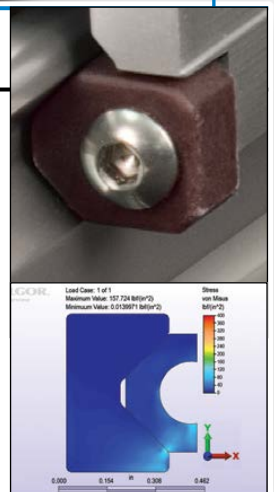

INCH OR METRIC MOUNTING

Your choice of blank, inch (US standard) or metric mounting to the plate

MOTOR ORIENTATION

YOU CAN CHOOSE:

- Direct drive option directly couples motor to the drive shaft; one-piece housing construction for optimum alignment and support of the motor
- Reduction option in 3:1 reduction (2:1 on MXB16)


YOUR MOTOR HERE

YOU CAN CHOOSE:

- Specify the device to be installed and actuator ships with proper mounting hardware
- Specify and ship your device to Tolomatic for factory installation
- Motor supplied and installed by Tolomatic

NON-BINDING BEARING ARMS

Bearings are tensioned indirectly, providing bind free adjustment

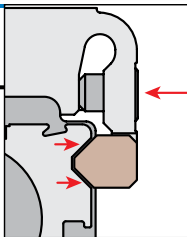

LIGHTWEIGHT ALUMINUM DESIGN

Clear anodized extrusion design is optimized for rigidity and strength

OPTIONS



AUXILIARY CARRIER **D****C**

- 2X higher Fz (load) capacity
- High bending moment capacity



FLOATING MOUNT **F****L**

- Compensates for non-parallelism between MX actuator and externally guided load



TUBE CLAMPS **T****C**

- Used for intermediate support
- Flush with bottom of actuator to retain low profile
- Drop-in, adjustable mounting locations (MXB16 uses T-nuts with mounting plates)



MOUNTING PLATES **M****P**

- Provides clearance for motor and mount
- 16,25,32 sizes attach with T-Nuts
- 40,50,63 sizes attach with Tube Clamps



HEAD COVER PLATE **H****C****2**

- Provides protection for pulley and bearing



SWITCHES

- Wide variety of sensing choices: Reed, Solid State PNP or NPN, available normally open or normally closed
- Flush mount, drop-in installation
- Bright LEDs, power & signal indication
- CE rated, RoHS compliant

NOTE: Boxed letters indicate ordering codes

MXB- PROFILED RAIL BELT-DRIVE ACTUATOR

ENDURANCE TECHNOLOGYSM

A Tolomatic Design Principle

Endurance TechnologySM features are designed for maximum durability to provide extended service life.

The MXB-P rodless electric belt-drive actuator is designed for applications requiring moderate to heavy load carrying and guidance. The MXB-P actuator features a profiled rail system with recirculating ball linear guides for optimal performance. The MXB-P belt-driven actuator features speeds up to 3810 mm/sec (150 in/sec) and thrusts up to 1859 N (418 lbf). Built-to-order in stroke lengths up to 5080 mm (200 in).

LOW CARRIER HEIGHT

- Reduces overall actuator envelope
- Large mounting pattern for excellent load stability

DURABLE BELT MATERIAL

High power polyurethane HTD tooth profile belt with steel tensile members resists stretching

OVERSIZED PULLEY BEARINGS

Drive shaft assembly incorporates oversized shielded/sealed ball bearings for long life and high speeds

MOTOR ORIENTATION

YOU CAN CHOOSE:

- Direct drive option directly couples motor to the drive shaft; one-piece housing construction for optimum alignment and support of the motor
- Reduction option in 3:1 reduction (2:1 on MXB16)

YOUR MOTOR HERE

YOU CAN CHOOSE:

- Specify the device to be installed and actuator ships with proper mounting hardware
- Specify and ship your device to Tolomatic for factory installation
- Motor supplied and installed by Tolomatic

INCH OR METRIC MOUNTING

Your choice of blank, inch (US standard) or metric mounting to the plate

LIGHTWEIGHT ALUMINUM DESIGN

Clear anodized extrusion design is optimized for rigidity and strength

EXTERNAL BUMPERS


Polyurethane bumpers protect the belt and clamp assembly from damage at end-of-stroke

BELT TENSIONING SYSTEM


The open slot on the guide plate permits easy access to the belt tensioning screw. No disassembly required

RECIRCULATING BALL BEARINGS

- Recirculating ball bearings are used to reduce friction and extend actuator life
- Designed with a grease pocket between ball elements to reduce friction, noise and maintenance
- Large permissible moment loads
- High speed operation, low heat generation
- High precision, smooth, low friction motion

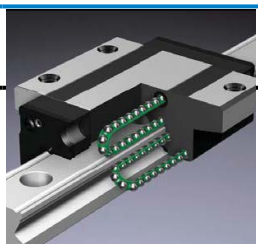

Grease pocket

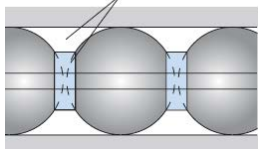

NOTE: Boxed letters indicate ordering codes

OPTIONS



AUXILIARY CARRIER **D****C**

- 2X higher Fz & Fy (load) capacity
- High bending moment capacity



MOUNTING PLATES **M****P**

- Provides clearance for motor and mount
- 16,25,32 sizes attach with T-Nuts
- 40,50,63 sizes attach with Tube Clamps



TUBE CLAMPS **T****C**

- Used for intermediate support
 - Flush with bottom of actuator to retain low profile
 - Drop-in adjustable mounting locations
- (Not available on the 16, 25 or 32 MXB-P sizes)



HEAD COVER PLATE **H****C****2**

- Provides protection for pulley and bearing



SWITCHES

- Wide variety of sensing choices: Reed, Solid State PNP or NPN, available normally open or normally closed
- Flush mount, drop-in installation
- Bright LEDs, power & signal indication
- CE rated, RoHS compliant

MXB Rodless Belt Drive Actuators

ACTUATOR SPECIFICATIONS AND BREAKAWAY TORQUE

MXB <u>U</u> , <u>S</u> & <u>P</u>						BREAKAWAY TORQUE	
MXB SIZE	BELT WIDTH mm	BELT DEAD LENGTH mm	PULLEY PITCH DIA. mm	STROKE PER REV. mm	*MAX. STROKE m	SINGLE CARRIER N-m	AUX. CARRIER OPT. (MXB-P) N-m
16	10	363.0	19.1	60.1	5.84	0.452	0.678
25	18	475.5	25.5	80.0	5.19	0.565	0.791
32	25	556.0	31.8	100.0	5.16	0.904	1.130
40	30	633.7	38.2	120.0	5.14	1.130	1.356
50	40	692.2	44.6	140.0	5.13	1.695	2.034
63	50	917.2	54.1	170.0	2.60	2.260	2.825

*Longer lengths may be possible with use of tube couplers - Contact Tolomatic

MXB <u>U</u> , <u>S</u> & <u>P</u>						BREAKAWAY TORQUE	
MXB SIZE	BELT WIDTH in	BELT DEAD LENGTH in	PULLEY PITCH DIA. in	STROKE PER REV. in	*MAX. STROKE in	SINGLE CARRIER lb-in	AUX. CARRIER OPT. (MXB-P) lb-in
16	0.39	14.29	0.753	2.366	230	4.0	6.0
25	0.71	18.72	1.003	3.151	204	5.0	7.0
32	0.98	21.89	1.253	3.936	203	8.0	10.0
40	1.18	24.95	1.504	4.725	202	10.0	12.0
50	1.57	27.25	1.754	5.510	201	15.0	18.0
63	1.97	36.11	2.130	6.692	102	20.0	25.0

MXB-J SIZE	WEIGHT				INERTIA		
	PLATE ASSEMBLY	BELT TENSIONER ASSEMBLY	BASE ACTUATOR	PER cm OF STROKE	DRIVE/IDLE PULLEY ASSEMBLIES	PLATE ASSEMBLY (INCLUDING BELT TENSIONER ASSEMBLY)	PER cm OF STROKE
	kg	kg	kg	kg/cm	kg-cm ²	kg-cm ²	kg-cm ²
16	0.05	0.05	0.72	0.0150	0.0250	0.0870	0.0006
25	0.12	0.07	1.17	0.0246	0.0759	0.3073	0.0020
32	0.22	0.13	1.89	0.0423	0.4143	0.8906	0.0043
40	0.41	0.21	3.55	0.0629	1.0884	2.2430	0.0075
50	0.47	0.33	4.50	0.0843	2.1196	3.9449	0.0135
63	1.15	0.38	7.46	0.1488	5.7101	11.1931	0.0249

MXB-J SIZE	WEIGHT				INERTIA		
	PLATE ASSEMBLY	BELT TENSIONER ASSEMBLY	BASE ACTUATOR	PER in OF STROKE	DRIVE/IDLE PULLEY ASSEMBLIES	PLATE ASSEMBLY (INCLUDING BELT TENSIONER ASSEMBLY)	PER in OF STROKE
	lb	lb	lb	lb/in	lb-in ²	lb-in ²	lb-in ²
16	0.11	0.10	1.59	0.084	0.0085	0.0297	0.0005
25	0.27	0.15	2.59	0.138	0.0259	0.1050	0.0017
32	0.48	0.30	4.17	0.237	0.1416	0.3043	0.0037
40	0.90	0.46	7.83	0.352	0.3719	0.7665	0.0065
50	1.03	0.72	9.93	0.472	0.7243	1.3480	0.0117
63	2.54	0.83	16.44	0.833	1.9512	3.8249	0.0216

MXB-S SIZE	WEIGHT				INERTIA			
	CARRIER ASSEMBLY	BELT TENSIONER ASSEMBLY	BASE ACTUATOR	PER cm OF STROKE	DRIVE/IDLE PULLEY ASSEMBLIES	CARRIER ASSEMBLY (INCLUDING BELT TENSIONER ASSEMBLY)		PER cm OF STROKE
	kg	kg	kg	kg/cm	kg-cm ²	SINGLE CARRIER	AUX. CARRIER OPT.	kg-cm ²
16	0.15	0.05	0.84	0.0150	0.0250	0.1782	0.3151	0.0006
25	0.24	0.07	1.65	0.0246	0.0759	0.5060	0.9035	0.0020
32	0.45	0.14	2.63	0.0423	0.4143	1.4879	2.6365	0.0043
40	0.80	0.21	5.06	0.0629	1.0884	3.6828	6.6119	0.0075
50	1.17	0.33	7.35	0.0843	2.1196	7.4111	13.1956	0.0135
63	3.42	0.38	14.56	0.1488	5.7101	27.7891	52.8158	0.0249

MXB-S SIZE	WEIGHT				INERTIA			
	CARRIER ASSEMBLY	BELT TENSIONER ASSEMBLY	BASE ACTUATOR	PER in OF STROKE	DRIVE/IDLE PULLEY ASSEMBLIES	CARRIER ASSEMBLY (INCLUDING BELT TENSIONER ASSEMBLY)		PER in OF STROKE
	lb	lb	lb	lb/in	lb-in ²	SINGLE CARRIER	AUX. CARRIER OPT.	lb-in ²
16	0.33	0.10	1.86	0.084	0.0085	0.0609	0.1077	0.0005
25	0.54	0.15	3.64	0.138	0.0259	0.1729	0.3087	0.0017
32	1.00	0.30	5.80	0.237	0.1416	0.5084	0.9009	0.0037
40	1.77	0.46	11.16	0.352	0.3719	1.2585	2.2594	0.0065
50	2.57	0.72	16.20	0.472	0.7243	2.5325	4.5092	0.0117
63	7.54	0.83	32.10	0.833	1.9512	9.4960	18.0481	0.0216

MXB-P SIZE	WEIGHT				INERTIA			
	CARRIER ASSEMBLY	BELT TENSIONER ASSEMBLY	BASE ACTUATOR	PER cm OF STROKE	DRIVE/IDLE PULLEY ASSEMBLIES	CARRIER ASSEMBLY (INCLUDING BELT TENSIONER ASSEMBLY)		PER cm OF STROKE
	kg	kg	kg	kg/cm	kg-cm ²	SINGLE CARRIER	AUX. CARRIER OPT.	kg-cm ²
16	0.18	0.05	1.08	0.0183	0.0250	0.2014	0.3615	0.0006
25	0.38	0.07	1.98	0.0348	0.0759	0.7297	1.3508	0.0020
32	0.74	0.13	3.55	0.0569	0.4143	2.2232	4.1072	0.0043
40	1.14	0.21	6.38	0.0959	1.0884	4.9138	9.0740	0.0075
50	2.28	0.33	9.45	0.1337	2.1196	12.9416	24.2565	0.0135
63	4.25	0.38	16.89	0.1981	5.7101	33.8324	64.9024	0.0249

MXB-P SIZE	WEIGHT				INERTIA			
	CARRIER ASSEMBLY	BELT TENSIONER ASSEMBLY	BASE ACTUATOR	PER in OF STROKE	DRIVE/IDLE PULLEY ASSEMBLIES	CARRIER ASSEMBLY (INCLUDING BELT TENSIONER ASSEMBLY)		PER in OF STROKE
	lb	lb	lb	lb/in	lb-in ²	SINGLE CARRIER	AUX. CARRIER OPT.	lb-in ²
16	0.39	0.10	2.38	0.102	0.0085	0.0688	0.1235	0.0005
25	0.84	0.15	4.36	0.195	0.0259	0.2493	0.4616	0.0017
32	1.64	0.30	7.83	0.318	0.1416	0.7597	1.4035	0.0037
40	2.51	0.46	14.07	0.537	0.3719	1.6791	3.1007	0.0065
50	5.03	0.72	20.84	0.749	0.7243	4.4224	8.2889	0.0117
63	9.36	0.83	37.24	1.110	1.9512	11.5611	22.1783	0.0216

MAXIMUM VELOCITY U 5080 mm/sec 200 in/sec

MAXIMUM VELOCITY S 2540 mm/sec 100 in/sec

MAXIMUM VELOCITY P 3810 mm/sec 150 in/sec

MAXIMUM ACCELERATION 30.48 m/sec² 1200 in/sec²

REPEATABILITY ± 0.051 mm ± 0.002 in

TEMPERATURE RANGE -12 to 54 °C 10 to 130 °F

⚠ Heat generated by the motor and drive should be taken into consideration as well as linear velocity and work cycle time. For applications that require operation outside of the recommended temperature range, contact the factory.



STRAIGHTNESS, FLATNESS 0.01702 L mm 0.00067 L in
Actuator mounted on a flat surface and fully restrained (see Mounting Plate Requirements, page MXB_11) L = Maximum distance between supports

⚠ The listed values relating to straightness/flatness are intended for reference purposes only, and not as an engineering standard of absolute tolerance for a given actuator. Appropriate installation is the single most important factor in reducing variation, so good engineering practices such as measurement, mapping, etc. must be employed in applications with stringent straightness/flatness requirements.





S & P TUBE CLAMP REQUIREMENTS

S SOLID BEARING

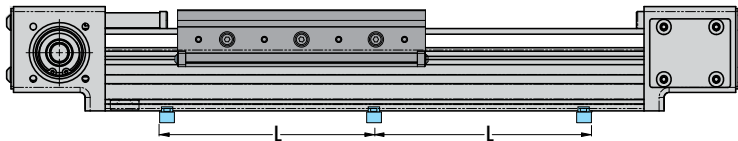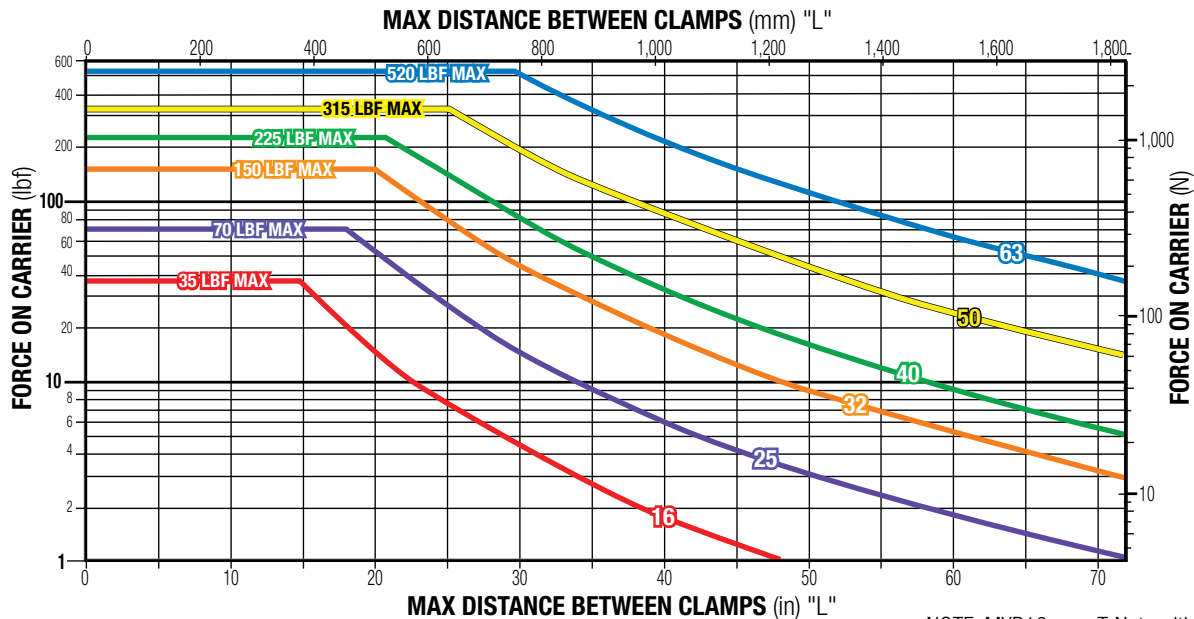

P PROFILE RAIL BEARING

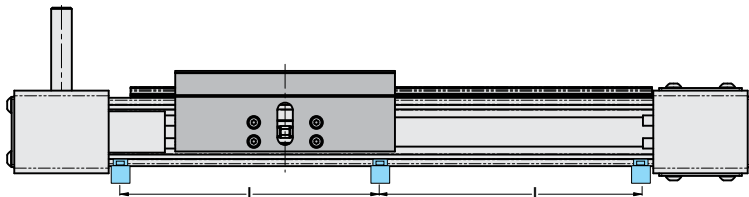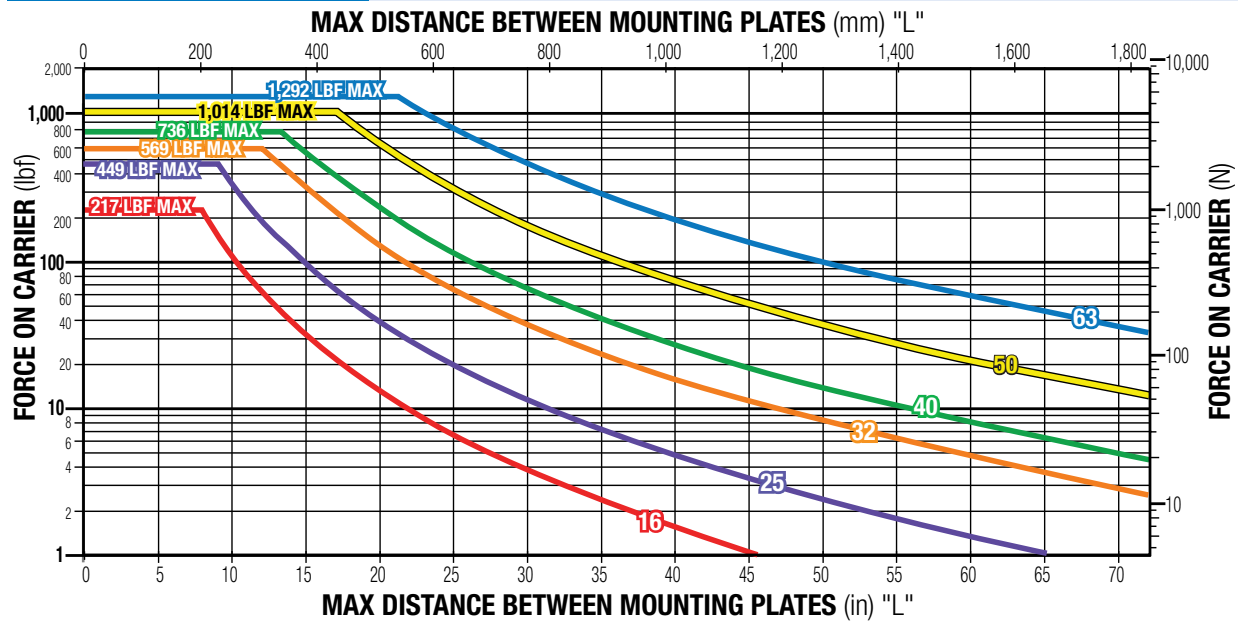


MXB-S Rodless Belt Drive Actuators

sizeit.tolomatic.com for fast, accurate actuator selection



S SOLID BEARING MOMENT AND LOAD CAPACITY


STANDARD CARRIER

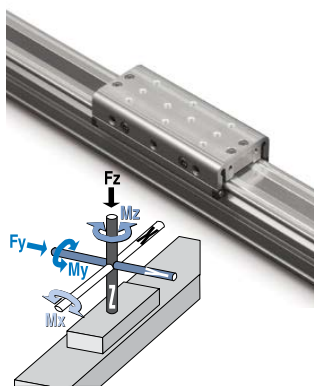

SIZE	MAX. BENDING MOMENTS			MAX. LOAD
	Mx	My	Mz	Fz
	N-m	N-m	N-m	N
16	2.5	2.1	2.8	156
25	6.8	12.4	3.8	311
32	11.3	39.5	15.8	667
40	31.1	67.8	24.9	1,001
50	35.6	131.0	38.5	1,401
63	66.1	264.0	58.8	2,313

SIZE	MAX. BENDING MOMENTS			MAX. LOAD
	Mx	My	Mz	Fz
	in-lbs	in-lbs	in-lbs	lbf
16	22	19	25	35
25	60	110	34	70
32	100	350	140	150
40	275	600	220	225
50	315	1,155	341	315
63	585	2,340	520	520

AUXILIARY CARRIER

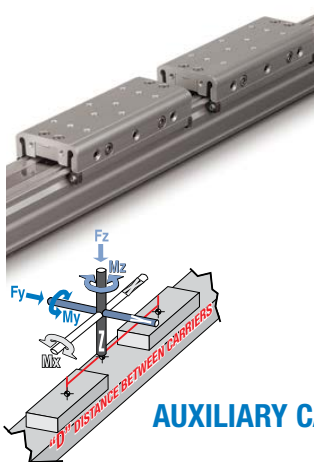


SIZE	"D" MIN. mm	MAX. BENDING MOMENTS*			MAX. LOAD
		Mxa	Mya	Mza	Fza
		N-m	N-m	N-m	N
16	127	5.0	19.8	19.8	311
25	152	13.6	47.5	47.5	623
32	178	22.6	119.0	119.0	1,334
40	216	62.1	216.0	216.0	2,002
50	218	71.2	306.0	306.0	2,802
63	330	132.0	764.0	764.0	4,626

SIZE	"D" MIN. in	MAX. BENDING MOMENTS*			MAX. LOAD
		Mxa	Mya	Mza	Fza
		in-lbs	in-lbs	in-lbs	lbf
16	5.0	44	175	175	70
25	6.0	120	420	420	140
32	7.0	200	1,050	1,050	300
40	8.5	550	1,913	1,913	450
50	8.6	630	2,709	2,709	630
63	13.0	1,170	6,760	6,760	1,040

*At minimum "D" distance see graph below for complete information

AUXILIARY CARRIER BENDING MOMENTS WITH INCREASED "D" DISTANCE BETWEEN CARRIERS

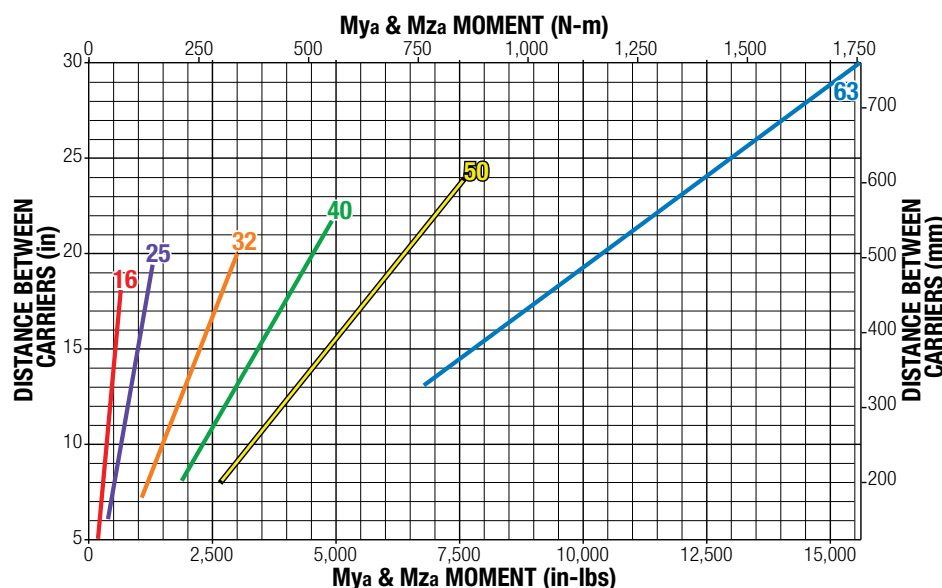

Ratings were calculated with the following conditions:

- 1.) Coupling between carriers is rigid.
- 2.) Load is equally distributed between carriers.
- 3.) Coupling device applies no misalignment loads to carriers.

⚠ The above ratings are the maximum values for shock-free, vibration-free operation in a typical industrial environment, which must not be exceeded even in dynamic operation. Contact Tolomatic for assistance in selecting the most appropriate actuator for your application.

The moment and load capacity of the actuator bearing system is based on an L10 life of 5,000 linear km (2×10^8 in) of travel. Life of the actuator will vary for each application depending on the combined loads, motion parameters and operating conditions. The load factor (L_F) for each application must not exceed a value of 1, as calculated below. Exceeding a load factor of 1 will diminish the actuator rated life.

$$L_F = \frac{M_x}{M_{x_{max}}} + \frac{M_y}{M_{y_{max}}} + \frac{M_z}{M_{z_{max}}} + \frac{F_y}{F_{y_{max}}} + \frac{F_z}{F_{z_{max}}} \leq 1$$


With combined loads, L_F must not exceed the value 1.

MXB-P Rodless Belt Drive Actuators

PROFILED RAIL BEARING MOMENT AND LOAD CAPACITY

⚠ Mating surface of mounted component must maintain a flatness of at least 0.040 mm [0.0015"]


STANDARD CARRIER

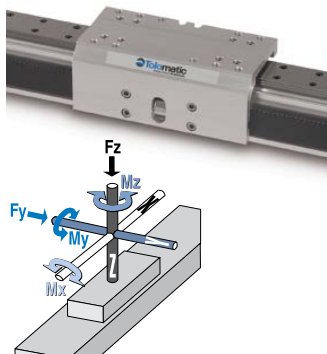

SIZE	MAX. BENDING MOMENTS			MAX. LOAD	MAX. THRUST
	Mx	My	Mz	Fy & Fz	
	N-m	N-m	N-m	N	N
16	4.5	38.3	38.3	966	169
25	14.3	56.7	42.6	1,996	672
32	25.6	152.0	152.0	2,531	930
40	68.2	216.0	216.0	3,274	1,112
50	91.7	394.0	394.0	4,510	1,446
63	115.0	603.0	603.0	5,745	1,859

SIZE	MAX. BENDING MOMENTS			MAX. LOAD	MAX. THRUST
	Mx	My	Mz	Fy & Fz	
	in-lbs	in-lbs	in-lbs	lbf	lbf
16	39	339	339	217	38
25	126	502	377	449	151
32	226	1,344	1,344	569	209
40	604	1,913	1,913	736	250
50	811	3,483	3,483	1,014	325
63	1,019	5,339	5,339	1,292	418

AUXILIARY CARRIER

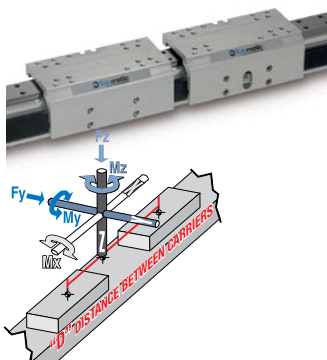

SIZE	"D" MIN.	MAX. BENDING MOMENTS			MAX. LOAD
	mm	Mxa	Mya	Mza	Fya & Fza
		N-m	N-m	N-m	N
16	127	8.9	70.0	70.0	1,932
25	152	28.5	182	182	3,993
32	178	51.1	249	249	5,063
40	216	136.0	407	407	6,549
50	218	183.0	561	561	9,020
63	330	230.0	1,074	1,074	11,490


SIZE	"D" MIN.	MAX. BENDING MOMENTS			MAX. LOAD
	in	Mxa	Mya	Mza	Fya & Fza
		in-lbs	in-lbs	in-lbs	lbf
16	5.0	79	620	620	434
25	6.0	252	1,610	1,610	898
32	7.0	453	2,202	2,202	1,138
40	8.5	1,208	3,601	3,601	1,472
50	8.6	1,623	4,966	4,966	2,028
63	13.0	2,038	9,508	9,508	2,583

*At minimum "D" distance - see graph below for bending moments at greater distances

AUXILIARY CARRIER BENDING MOMENTS WITH INCREASED "D" DISTANCE BETWEEN CARRIERS

Ratings were calculated with the following conditions:

- 1.) Coupling between carriers is rigid.
- 2.) Load is equally distributed between carriers.
- 3.) Coupling device applies no misalignment loads to carriers.

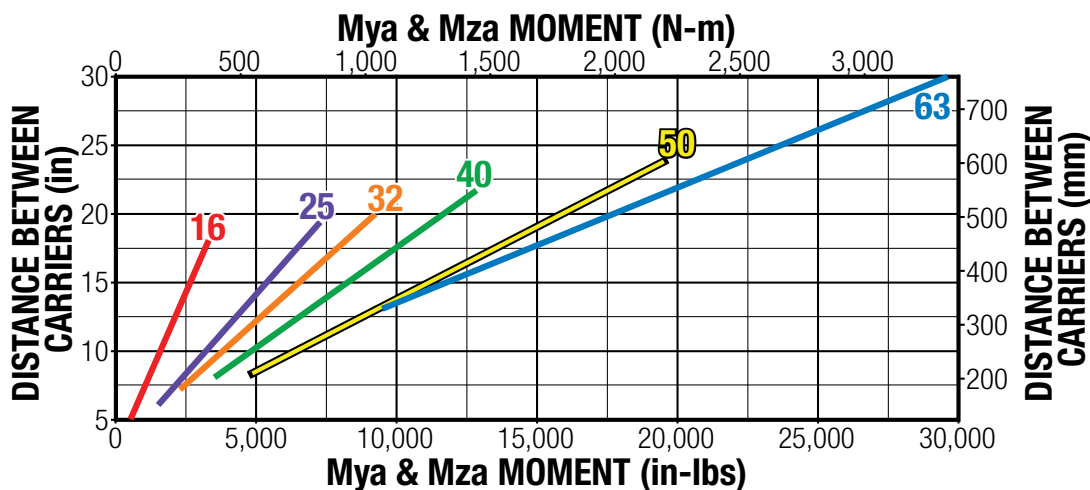

⚠ The above ratings are the maximum values for shock-free, vibration-free operation in a typical industrial environment, which must not be exceeded even in dynamic operation. Contact Tolomatic for assistance in selecting the most appropriate actuator for your application.

The moment and load capacity of the actuator bearing system is based on an L10 life of 5,000 linear km (2x10⁸ in) of travel. Life of the actuator will vary for each application depending on the combined loads, motion parameters and operating conditions. The load factor (L_F) for each application must not exceed a value of 1, as calculated below. Exceeding a load factor of 1 will diminish the actuator rated life.

$$L_F = \frac{M_x}{M_{x_{max}}} + \frac{M_y}{M_{y_{max}}} + \frac{M_z}{M_{z_{max}}} + \frac{F_y}{F_{y_{max}}} + \frac{F_z}{F_{z_{max}}} \leq 1$$

With combined loads, L_F must not exceed the value 1.

MXB-P Rodless Belt Drive Actuator

sizeit.tolomatic.com for fast, accurate actuator selection





LOAD DEFLECTION



DEFLECTION TESTING WAS DONE UNDER THESE CRITERIA:

- 1.) Actuator was properly mounted with distance between mounting plates within recommendations
- 2.) Deflection was measured at 12" from center of carrier as shown (see Mounting Plate Requirements page me_11)



DEFLECTION ABOUT X AXIS

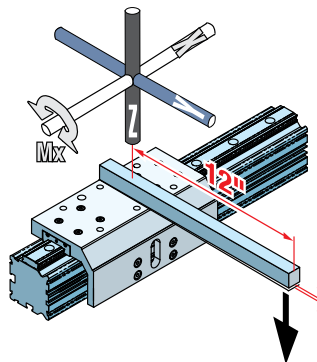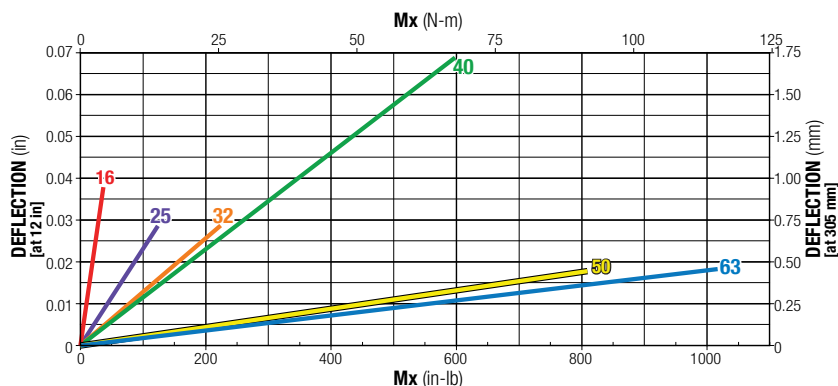

DEFLECTION ABOUT Y AXIS

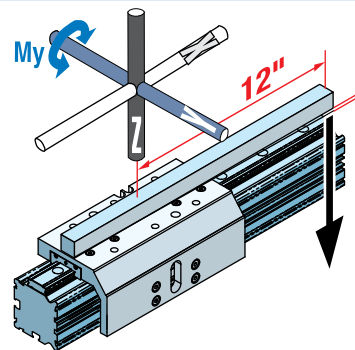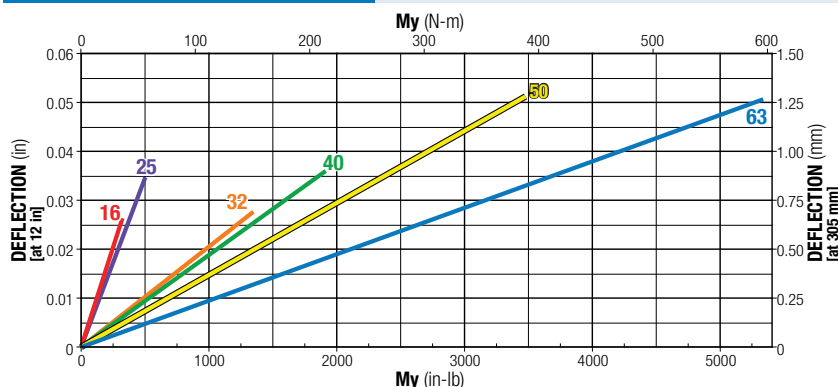


DEFLECTION ABOUT Z AXIS

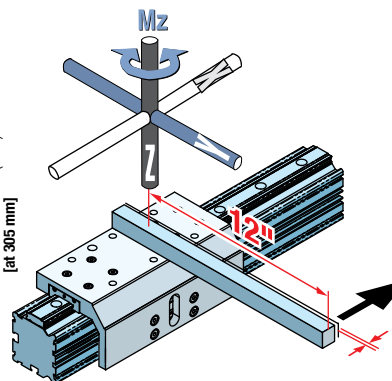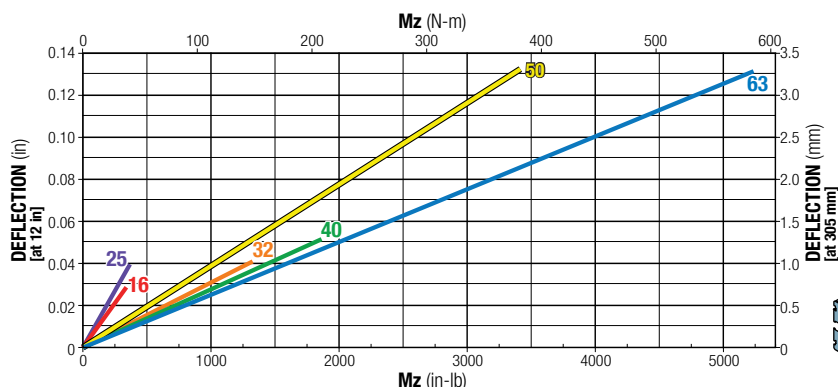

SPEED FACTOR

FOR APPLICATIONS WITH HIGH SPEED OR SIGNIFICANT SHOCK AND VIBRATION:

Calculated values of loads and bending moments must be increased by speed factor from the graph at right to obtain full rated life of profiled rail bearing system.

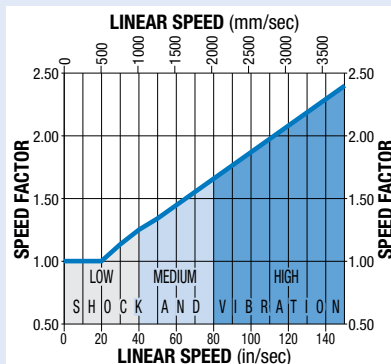

PROFILLED RAIL LUBRICATION

Proper lubrication of profiled rail bearing system is essential for normal operation and achievement of full rated life of MX-P actuators. Lubrication should be performed at intervals of 101 km (4x10⁶ in) of travel or once every year, whichever occurs first. **However, operating conditions such as high speed or significant shock and vibration may require more frequent lubrication.** Please consult Tolomatic for recommendations.

Recommended grease types:

1. Refined mineral oil-based multi-purpose grease with lithium thickening agent.
2. High-grade synthetic oil-based grease with urea thickening agent.


ACTUATOR & OPTION DIMENSIONS



Dimensions in millimeters

Dimensions in inches


Dimensions in millimeters



Dimensions in inches

MXB-S Rodless Belt Drive Actuator

SOLID BEARING DIMENSIONS

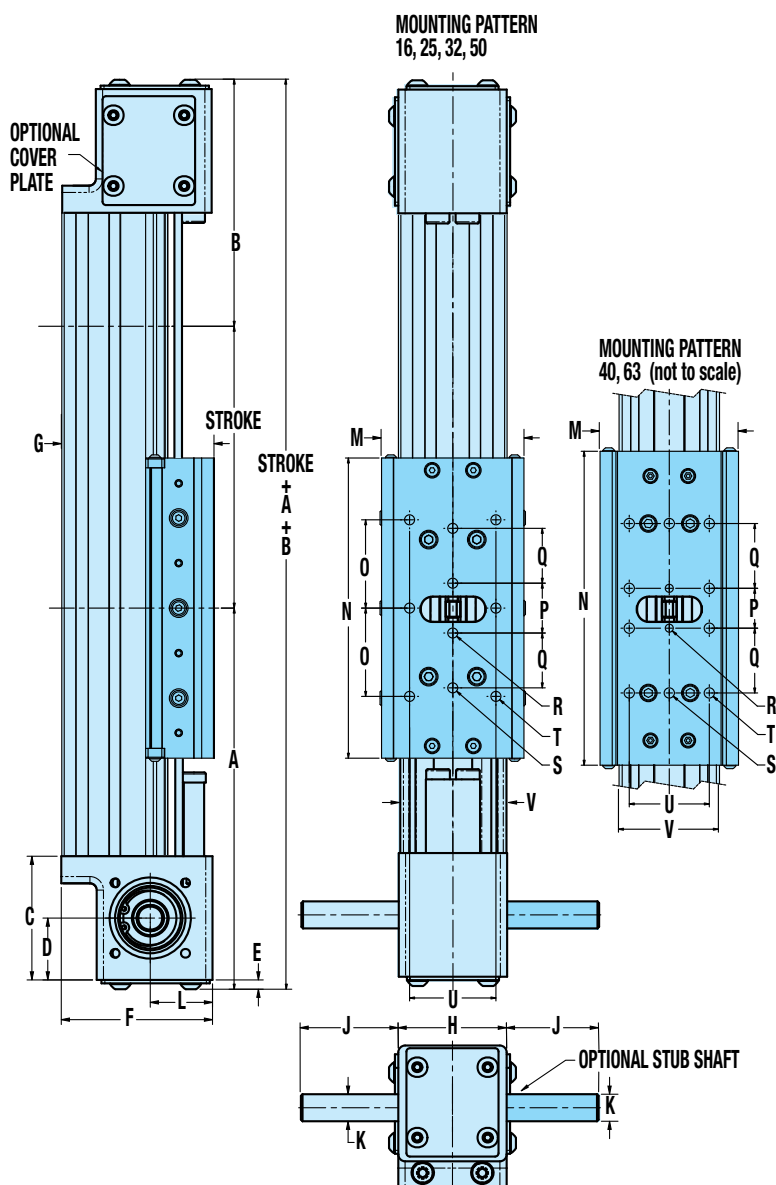

	MXB16	MXB25	MXB32	MXB40	MXB50	MXB63
A	135.3	173.9	179.3	216.6	217.8	275.1
B	119.0	139.3	163.2	192.7	212.0	262.1
C	50.8	58.0	55.9	78.7	82.6	96.1
D	25.4	29.0	25.4	39.4	40.0	45.3
E	3.8	4.4	4.4	4.4	4.4	4.4
F	52.8	66.0	77.5	93.8	110.6	139.3
G*	45.8	58.4	77.8	89.2	112.8	139.7
H	44.5	50.8	69.9	82.6	98.4	111.1
(LMI) J	15.0	57.7	57.7	47.5	47.5	47.5
(RP) J	46.6	57.7	57.7	47.5	47.5	47.5
K	Ø9.53	Ø12.70	Ø12.70	Ø12.70	Ø12.70	Ø12.70
L	26.4	29.2	27.9	39.7	41.5	52.2
M	40.1	55.4	72.6	88.2	104.1	142
N	110.0	134.9	153	200	200.9	307.6
O	30	39.9	45	-	47.8	-
P	-	25.4	25.4	25.4	63.5	76.2
Q	-	27.2	28	41.3	31.8	38.1
R	-	M6x1.0 (2)	M8x1.25 (2)	M8x1.25 (2)	M10x1.5 (2)	M10x1.5 (2)
S	-	M6x1.0 (2)	M8x1.25 (2)	M8x1.25 (2)	M10x1.5 (2)	M10x1.5 (2)
T	M4x0.7 (6)	M6x1.0 (6)	M8x1.25 (6)	M8x1.25 (8)	M10x1.5 (6)	M10x1.5 (8)
U*	30.0	30.0	44.0	51.0	65.8	82.6
V	30.00	42.00	55.37	64.00	78.74	100.00

Dimensions in millimeters


	MXB16	MXB25	MXB32	MXB40	MXB50	MXB63
A	5.33	6.85	7.06	8.53	8.57	10.83
B	4.69	5.49	6.43	7.59	8.34	10.33
C	2.00	2.28	2.20	3.10	3.25	3.79
D	1.00	1.14	1.00	1.55	1.58	1.79
E	0.15	0.17	0.17	0.17	0.17	0.17
F	2.08	2.60	3.05	3.69	4.35	5.48
G*	1.80	2.30	3.06	3.51	4.44	5.50
H	1.75	2.00	2.75	3.25	3.88	4.38
(LMI) J	0.59	2.27	2.27	1.87	1.87	1.87
(RP) J	1.83	2.27	2.27	1.87	1.87	1.87
K	Ø.375	Ø.500	Ø.500	Ø.500	Ø.500	Ø.500
L	1.04	1.15	1.10	1.56	1.63	2.06
M	1.58	2.18	2.86	3.47	4.1	5.59
N	4.33	5.31	6.02	7.87	7.91	12.11
O	1.18	1.57	1.77	-	1.88	-
P	-	1.00	1.00	1.00	2.50	3.00
Q	-	1.07	1.10	1.63	1.25	1.50
R	-	1/4-20 (2)	1/4-20 (2)	1/4-20 (2)	3/8-16 (2)	3/8-16 (2)
S	-	#10-32 (2)	1/4-20 (2)	5/16-18 (2)	3/8-16 (2)	3/8-16 (2)
T	#8-32 (6)	1/4-20 (6)	1/4-20 (6)	5/16-18 (8)	3/8-16 (6)	3/8-16 (8)
U*	1.18	1.18	1.73	2.00	2.59	3.25
V	1.18	1.65	2.18	2.52	3.10	3.94

Dimensions in inches

MXB-S Rodless Belt Drive Actuator

SOLID BEARING OPTION DIMENSIONS

tolomatic.com/CAD Download 3D CAD
Always use CAD solid model to determine
critical dimensions

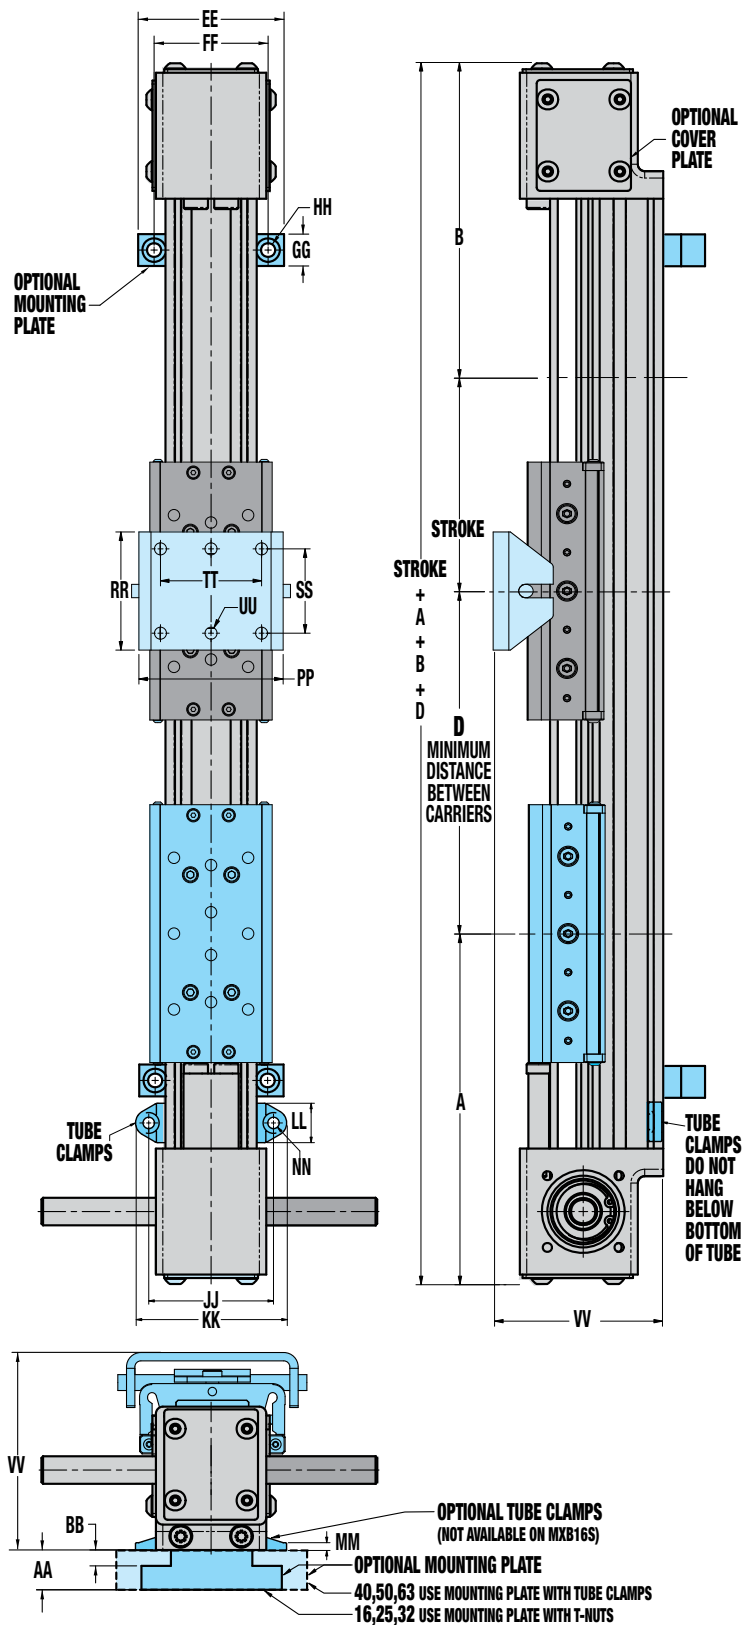

	MXB16	MXB25	MXB32	MXB40	MXB50	MXB63
A	135.3	173.9	179.3	216.6	217.8	275.1
B	119.0	139.3	163.2	192.7	212.0	262.1
D	127.0	152.4	177.0	215.9	216.4	330.2

OPTIONAL MOUNTING PLATES

AA	15.9	15.9	19.1	25.4	31.8	25.4
BB	6.4	6.4	7.6	—	—	—
DD	60.9	77.7	95.2	106.1	127.4	153.3
EE	60.0	63.5	86.4	127.0	142.2	203.2
FF	44.5	50.8	59.9	112.0	127.0	177.8
GG	25.4	25.4	25.4	20.1	20.1	25.4
HH	Ø5.6 THRU └┐ Ø9.4	Ø5.6 THRU └┐ Ø9.4	Ø7.1 THRU └┐ Ø11.2	Ø7.1 THRU (2)	Ø7.1 THRU (2)	Ø7.1 THRU (2)
	└┐ 5.6 (2)	└┐ 5.6 (2)	└┐ 7.1 (2)			

OPTIONAL TUBE CLAMPS

JJ	—	57.0	74.1	82.7	97.5	131.7
KK	—	69.0	87.4	96.7	111.5	150.7
LL	—	18.0	16.0	14.0	14.0	19.0
MM	—	3.6	4.3	3.8	3.8	6.1
NN	—	5.2	7.1	7.1	7.1	10.7

OPTIONAL FLOATING MOUNT

PP	47.2	64.1	93.3	109.7	128.0	154.9
RR	24.9	31.8	70.1	100.0	100.0	127.0
SS	11.9	15.9	50.0	74.9	80.0	100.1
TT	—	—	—	55.1	—	70.1
UU	Ø4.6 (2)	Ø6.1 (2)	Ø7.1 (2)	Ø7.1 (4)	Ø9.1 (2)	Ø8.6 (4)
VV	58.5	70.9	93.3	108.2	133.1	156.8

Dimensions in millimeters

	MXB16	MXB25	MXB32	MXB40	MXB50	MXB63
A	5.33	6.85	7.06	8.53	8.57	10.83
B	4.69	5.49	6.43	7.59	8.34	10.33
D	5.00	6.00	7.00	8.50	8.60	13.00

OPTIONAL MOUNTING PLATES

AA	0.63	0.63	0.75	1.00	1.25	1.00
BB	0.25	0.25	0.30	—	—	—
DD	2.4	3.06	3.75	4.18	5.01	6.04
EE	2.36	2.50	3.40	5.00	5.60	8.00
FF	1.75	2.00	2.75	4.41	5.00	7.00
GG	1.00	1.00	1.00	0.79	0.79	1.00
HH	Ø.22 THRU └┐ Ø.37	Ø.22 THRU └┐ Ø.37	Ø.28 THRU └┐ Ø.44	Ø.28 THRU (2)	Ø.28 THRU (2)	Ø.28 THRU (2)
	└┐ .22 (2)	└┐ .22 (2)	└┐ .28 (2)			

OPTIONAL TUBE CLAMPS

JJ	—	2.24	2.92	3.26	3.84	5.19
KK	—	2.72	3.44	3.81	4.39	5.93
LL	—	0.71	0.63	0.55	0.55	0.75
MM	—	0.14	0.17	0.15	0.15	0.24
NN	—	0.20	0.28	0.28	0.28	0.42


OPTIONAL FLOATING MOUNT

PP	1.86	2.52	3.37	4.32	5.04	6.10
RR	0.98	1.25	2.76	3.94	3.94	5.00
SS	0.47	0.63	1.97	2.95	3.15	3.94
TT	—	—	—	2.17	—	2.76
UU	Ø.18 (2)	Ø.24 (2)	Ø.28 (2)	Ø.28 (4)	Ø.36 (2)	Ø.34 (4)
VV	2.30	2.79	3.67	4.26	5.24	6.18

Dimensions in inches

MXB-P Rodless Belt Drive Actuator

PROFILED RAIL BEARING DIMENSIONS

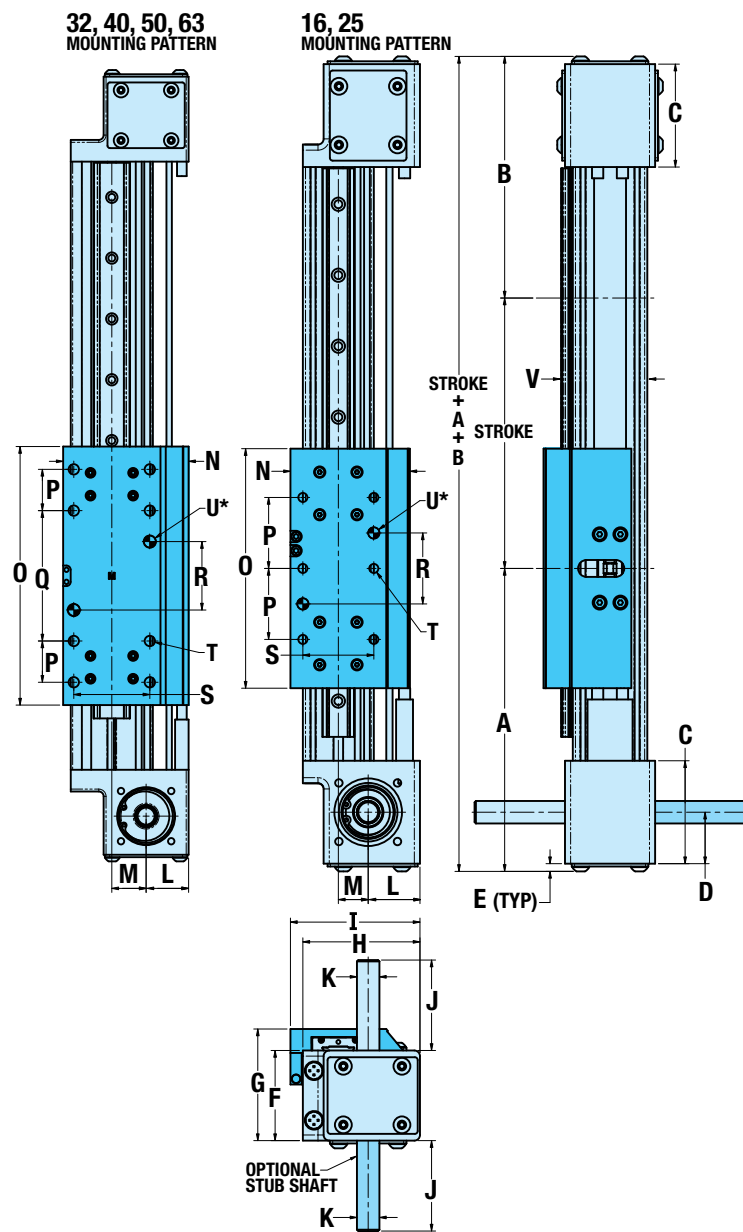

	MXB16	MXB25	MXB32	MXB40	MXB50	MXB63
A	135.3	173.9	187.8	216.6	224.7	275.1
B	119.0	139.3	154.7	192.7	205.0	262.1
C	50.8	58.0	55.9	78.7	82.6	96.1
D	25.4	29.0	25.4	39.4	40.0	45.3
E	3.8	4.4	4.4	4.4	4.4	4.4
F	44.5	50.8	69.9	82.6	98.4	111.1
G	53.2	62.9	84.6	98.7	129.6	145.6
H	52.8	66.0	77.5	93.8	110.6	139.3
I	54.8	73.0	82.5	103.9	117.9	147.1
(LM)J	15.0	57.7	57.7	47.5	47.5	47.5
(RP)J	46.6	57.7	57.7	47.5	47.5	47.5
K	Ø9.53	Ø12.70	Ø12.70	Ø12.70	Ø12.70	Ø12.70
L	26.4	29.2	27.9	39.7	41.5	52.2
M	11.4	16.8	22.6	22.2	29.8	37.1
N	45.3	67.4	82.5	97.8	117.4	150.6
O	110.0	135.0	170.0	200.0	216.0	304.8
P	40.0	40.0	27.1	25.4	25.4	40.0
Q	—	—	85.7	114.3	69.8	130.0
R	40.00	40.00	45.00	63.50	38.10	65.00
S	28.00	40.00	50.00	72.00	79.38	98.30
T	M4x0.7	M6x1.0	M8x1.25	M8x1.25	M8x1.25	M10x1.5
U*	Ø4.045 / 4.020 ↓6.35	Ø6.045 / 6.020 ↓6.35	Ø8.045 / 8.020 ↓9.53	Ø8.045 / 8.020 ↓12.70	Ø8.045 / 8.020 ↓12.70	Ø10.045 / 10.020 ↓12.70
V	35.50	48.60	62.87	73.50	93.74	115.00

Dimensions in millimeters

	MXB16	MXB25	MXB32	MXB40	MXB50	MXB63
A	5.33	6.85	7.39	8.53	8.85	10.83
B	4.69	5.49	6.09	7.59	8.07	10.33
C	2.00	2.28	2.20	3.10	3.25	3.79
D	1.00	1.14	1.00	1.55	1.58	1.79
E	0.15	0.17	0.17	0.17	0.17	0.17
F	1.75	2.00	2.75	3.25	3.88	4.38
G	2.10	2.48	3.33	3.88	5.10	5.73
H	2.08	2.60	3.05	3.69	4.35	5.48
I	2.16	2.87	3.25	4.09	4.64	5.79
(LM)J	0.59	2.27	2.27	1.87	1.87	1.87
(RP)J	1.83	2.27	2.27	1.87	1.87	1.87
K	Ø.375	Ø.500	Ø.500	Ø.500	Ø.500	Ø.500
L	1.04	1.15	1.10	1.56	1.63	2.06
M	0.45	0.66	0.89	0.87	1.17	1.46
N	1.78	2.65	3.25	3.85	4.62	5.93
O	4.33	5.31	6.69	7.87	8.50	12.00
P	1.57	1.57	1.07	1.00	1.00	1.57
Q	—	—	3.37	4.50	2.75	5.12
R	1.575	1.575	1.772	2.500	1.500	2.559
S	1.102	1.575	1.969	2.835	3.125	3.870
T	#8-32(6)	1/4-20(6)	5/16-18(8)	5/16-18(8)	5/16-18(8)	3/8-16(8)
U*	Ø.1583 / .1573 (2) ↓.250	Ø.2520 / .2510 (2) ↓.250	Ø.3145 / .3135 (2) ↓.375	Ø.3145 / .3135 (2) ↓.500	Ø.3145 / .3135 (2) ↓.500	Ø.3770 / .3760 (2) ↓.500
V	1.40	1.91	2.48	2.89	3.69	4.53

Dimensions in inches

*DOWEL HOLES


⊕	0.08 mm (M)
⊕	0.003 in (M)

MXB-P Rodless Belt Drive Actuator

tolomatic.com/CAD Download 3D CAD
Always use CAD solid model to determine
critical dimensions



PROFIED RAIL BEARING OPTION DIMENSIONS

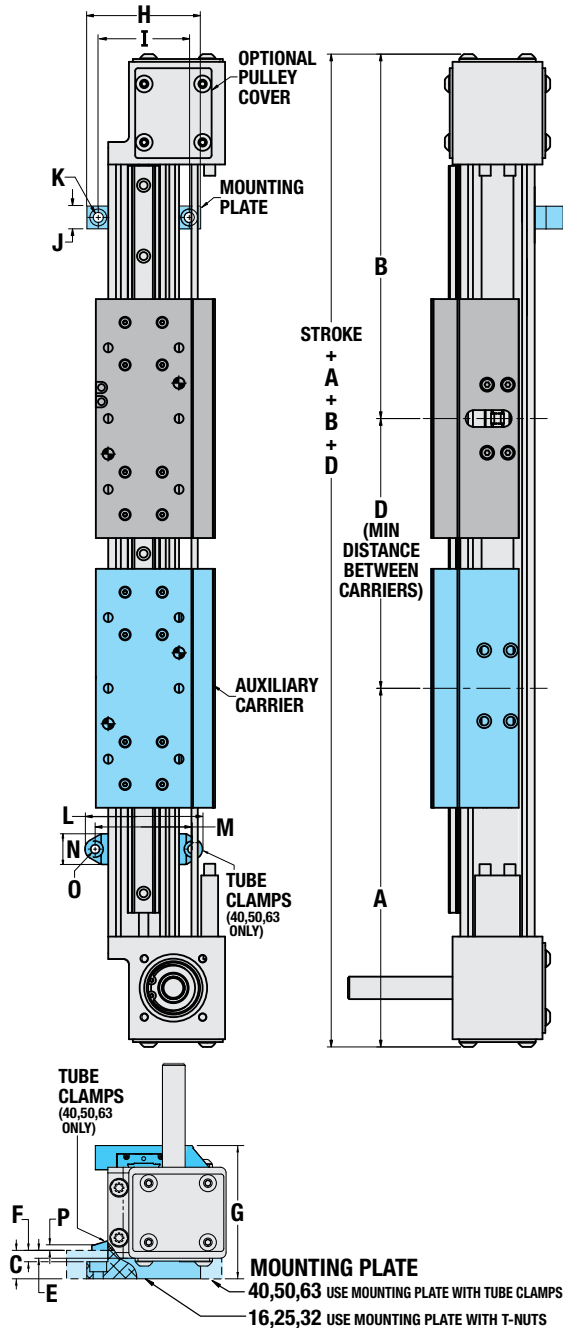

	MXB16	MXB25	MXB32	MXB40	MXB50	MXB63
A	135.3	173.9	187.8	216.6	224.7	275.1
B	119.0	139.3	154.7	192.7	205.0	262.1
AUXILIARY CARRIER						
D	127.0	152.4	177.0	215.9	216.4	330.2
MOUNTING PLATE						
C	15.9	15.9	19.1	25.4	31.8	25.4
E	7.2	4.4	7.2	9.3	9.8	5.6
F	6.4	6.4	7.6	—	—	—
G	61.9	74.4	96.5	114.8	151.4	165.4
H	60.0	63.5	86.4	127.0	142.2	203.2
I	44.5	50.8	69.9	112.0	127.0	177.8
J	25.4	25.4	25.4	20.1	20.1	25.4
K	Ø5.6 THRU └┐ Ø9.4 └┐ 5.6 (2)	Ø5.6 THRU └┐ Ø9.4 └┐ 5.6 (2)	Ø7.1 THRU └┐ Ø11.2 └┐ 7.1 (2)	Ø7.1 THRU (2)	Ø7.1 THRU (2)	Ø7.1 THRU (2)
TUBE CLAMPS						
L	—	—	—	96.8	111.5	150.6
M	—	—	—	82.8	97.5	131.8
N	—	—	—	14.0	14.0	19.1
O	—	—	—	7.1	7.1	10.7
P	—	—	—	3.8	3.8	6.1

Dimensions in millimeters


	MXB16	MXB25	MXB32	MXB40	MXB50	MXB63
A	5.33	6.85	7.39	8.53	8.85	10.83
B	4.69	5.49	6.09	7.59	8.07	10.33
AUXILIARY CARRIER						
D	5.00	6.00	7.00	8.50	8.60	13.00
MOUNTING PLATE						
C	0.63	0.63	0.75	1.00	1.25	1.00
E	0.28	0.17	0.29	0.37	0.39	0.22
F	0.25	0.25	0.30	—	—	—
G	2.44	2.93	3.80	4.52	5.96	6.51
H	2.36	2.50	3.40	5.00	5.60	8.00
I	1.75	2.00	2.75	4.41	5.00	7.00
J	1.00	1.00	1.00	0.79	0.79	1.00
K	0.22 THRU └┐ 0.37 └┐ .22 (2)	0.22 THRU └┐ 0.37 └┐ .22 (2)	0.28 THRU └┐ 0.44 └┐ .28 (2)	0.28 THRU (2)	0.28 THRU (2)	0.28 THRU (2)
TUBE CLAMPS						
L	—	—	—	3.81	4.39	5.93
M	—	—	—	3.26	3.84	5.19
N	—	—	—	0.55	0.55	0.75
O	—	—	—	0.28	0.28	0.42
P	—	—	—	0.15	0.15	0.24

Dimensions in inches


MXB Rodless Belt Drive Actuator

DIRECT DRIVE MOTOR MOUNTING


MXB-U

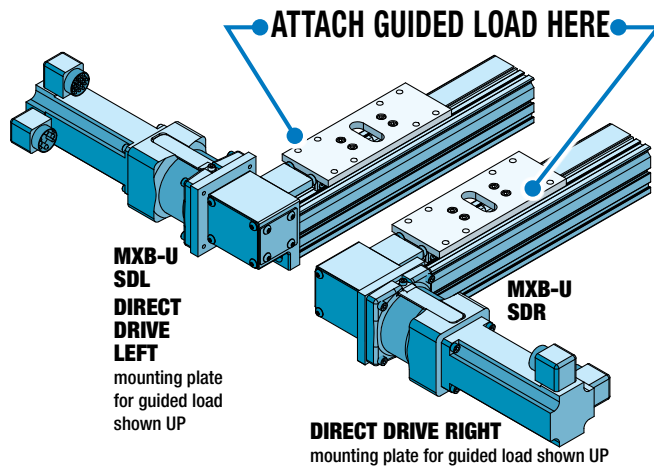

MXB-S

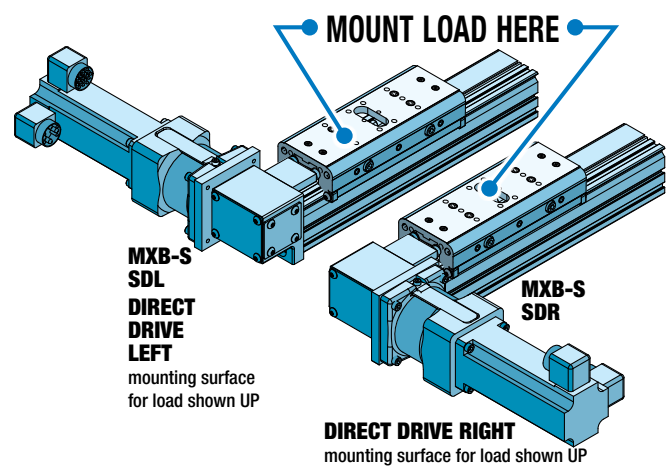

MXB-P

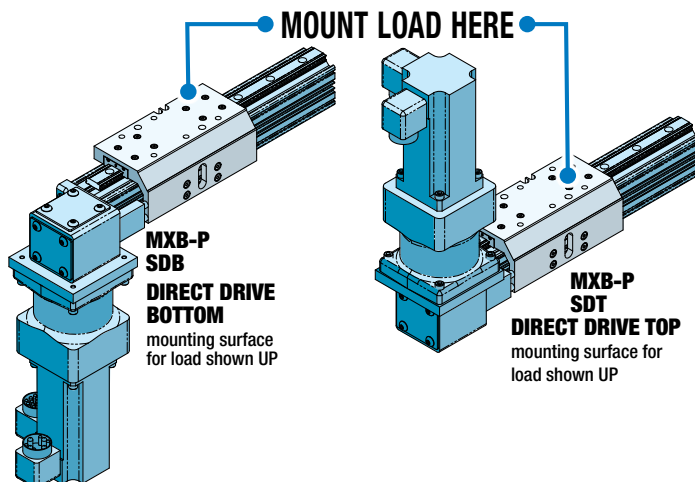

MOTOR MOUNTING

The MXB-P is unique among Tolomatic belt drive actuators. The mounting surface of the carrier is located 90° from the motion of the belt. The side opposite the belt is reserved for switch placement. The bottom of the actuator is reserved for mounting. If the motor is mounted in the SDT (direct drive top orientation), be sure the load mounted to the carrier does not interfere with the motor.



LARGE FRAME MOTORS AND SMALLER SIZE ACTUATORS: Cantilevered motors need to be supported if subjected to continuous rapid reversing duty and/or under dynamic conditions.


MXB Rodless Belt Drive Actuator

tolomatic.com/CAD Download 3D CAD
Always use CAD solid model to determine
critical dimensions




REDUCTION DRIVE MOTOR MOUNTING


MXB-U

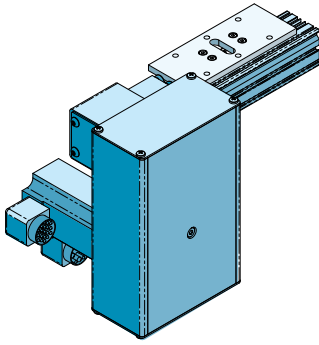


**REDUCTION DRIVE
BOTTOM LEFT (SDBL)**
mounting plate
for guided load shown UP

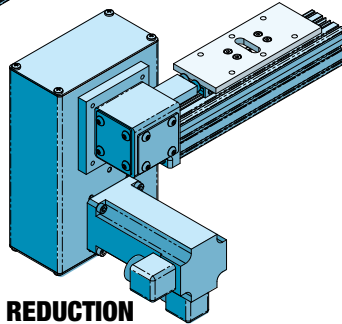

**REDUCTION
DRIVE
BOTTOM RIGHT (SDBR)**
mounting plate for
guided load shown UP

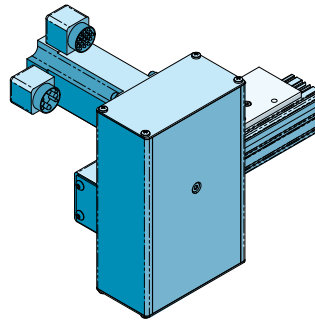


**REDUCTION DRIVE
TOP LEFT (SDTL)**
mounting plate for
guided load shown UP

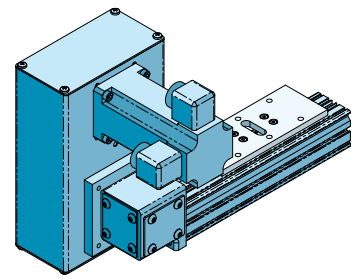


**REDUCTION DRIVE
TOP RIGHT (SDTR)**
mounting plate for
guided load shown UP


MXB-S

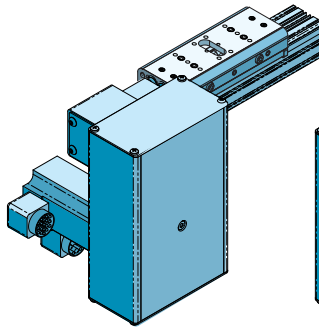


**REDUCTION DRIVE
BOTTOM LEFT (SDBL)**
mounting surface
for load shown UP

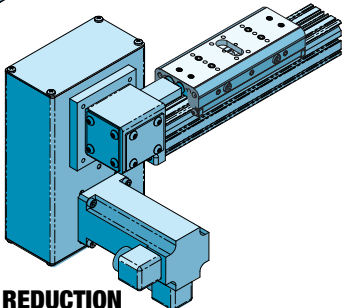

**REDUCTION
DRIVE
BOTTOM RIGHT (SDBR)**
mounting surface for load
shown UP

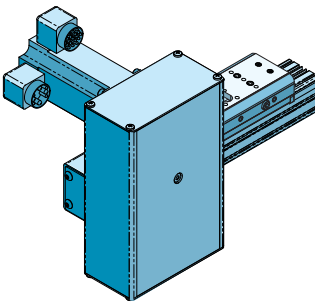


**REDUCTION DRIVE
TOP LEFT (SDTL)**
mounting surface
for load shown UP

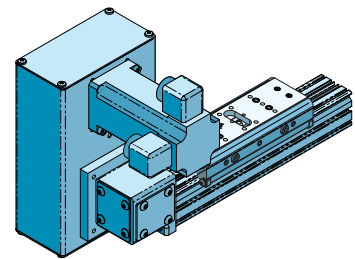


**REDUCTION DRIVE
TOP RIGHT (SDTR)**
mounting surface
for load shown UP


MXB-P

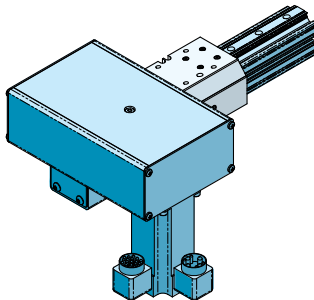


**REDUCTION DRIVE
RIGHT BOTTOM (SDBR)**
mounting surface
for load shown UP

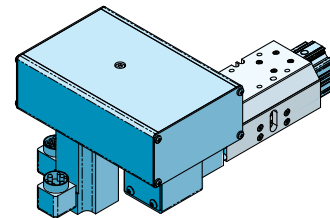

**REDUCTION DRIVE
LEFT BOTTOM (SDBL)**
mounting surface
for load shown UP

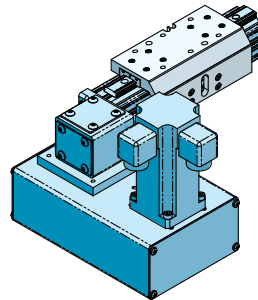

**REDUCTION DRIVE
RIGHT TOP (SDRT)**
mounting surface
for load shown UP

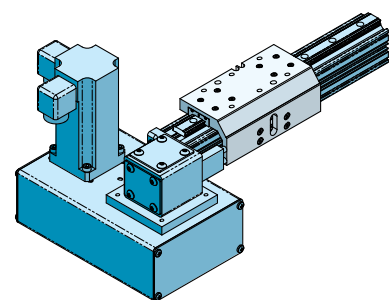

**REDUCTION DRIVE
LEFT TOP (SDLT)**
mounting surface
for load shown UP



See tolomatic.com for 3D solid model(s) with motor mounting dimensions

MXB Rodless Belt Drive Actuator

SWITCHES

SPECIFICATIONS



RoHS
COMPLIANT



MX products offer a wide range of sensing choices. There are 12 switch choices: reed, solid state PNP (sourcing) or solid state NPN (sinking); in normally open or normally closed; with flying leads or quick-disconnect.

Commonly used for end-of-stroke positioning, these switches allow drop-in installation anywhere along the entire actuator length. The one-piece design includes the retained fastening hardware. The magnet and magnet hardware are located on the carrier. See the dimensional drawings on page [MXB_23](#) for details of magnet and switch locations. Switches and magnets can be installed in the field at any time.

Switches are used to send digital signals to PLC (programmable logic controller), TTL, CMOS circuit or other controller device. Switches contain reverse polarity protection. Solid state QD cables are shielded; shield should be terminated at flying lead end.

All switches are CE rated and are RoHS compliant. Switches feature bright red or yellow LED signal indicators; solid state switches also have green LED power indicators.

	Order Code	Lead	Switching Logic	Power LED	Signal LED	Operating Voltage	**Power Rating (Watts)	Switching Current (mA max.)	Current Consumption	Voltage Drop	Leakage Current	Temp. Range	Shock / Vibration
REED	R Y	5m	SPST Normally Open	—	Red	5 - 240 AC/DC	**10.0	100mA	—	3.0 V max.	—	14 to 158°F [-10 to 70°C]	50 G / 9 G
	R K	QD*											
	N Y	5m	SPST Normally Closed	—	Yellow	5 - 110 AC/DC							
	N K	QD*											
SOLID STATE	T Y	5m	PNP (Sourcing) Normally Open	Green	Yellow	10 - 30 VDC	**3.0	100mA	20 mA @ 24V	2.0 V max.	0.05 mA max.		
	T K	QD*											
	K Y	5m	NPN (Sinking) Normally Open	Green	Red								
	K K	QD*											
	P Y	5m	PNP (Sourcing) Normally Closed	Green	Yellow								
	P K	QD*											
	H Y	5m	NPN (Sinking) Normally Closed	Green	Red								
	H K	QD*											


*QD = Quick-disconnect

Enclosure classification IEC 529 IP67 (NEMA 6)

CABLES: Robotic grade, oil resistant polyurethane jacket, PVC insulation

⚠ **WARNING: Do not exceed power rating (Watt = Voltage x Amperage). Permanent damage to sensor will occur.

SWITCH INSTALLATION AND REPLACEMENT








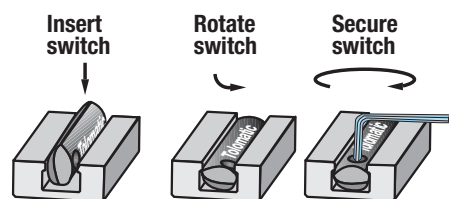


Place switch in side groove on tube at desired location with "Tolomatic" facing outward. While applying light pressure to the switch, rotate the switch halfway into the groove. Maintaining light pressure, rotate the switch in the opposite direction until it is fully inside the groove with "Tolomatic" visible. Re-position the switch to the exact location and lock the switch securely into place by tightening the screw on the switch.

MXB Rodless Belt Drive Actuator


SWITCHES

WIRING DIAGRAMS

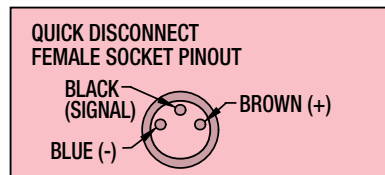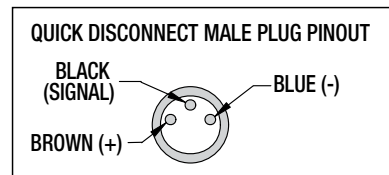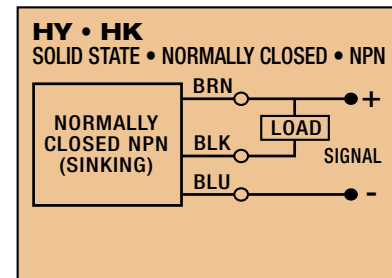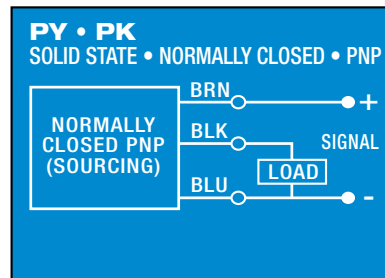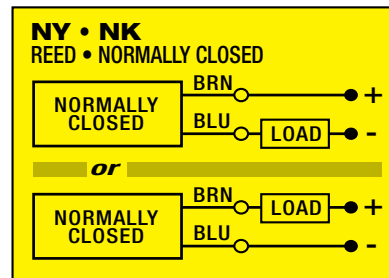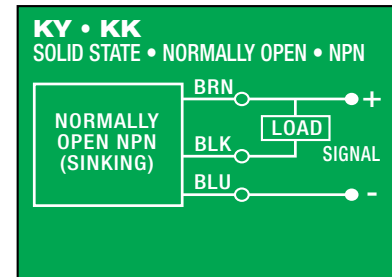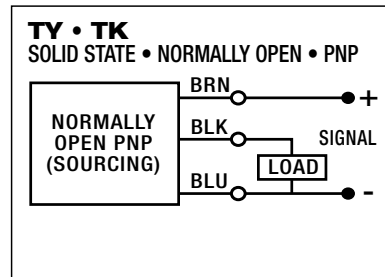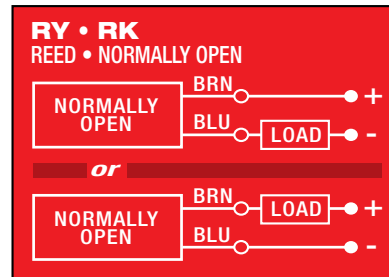


MOUNTING DIMENSIONS


MXB-U

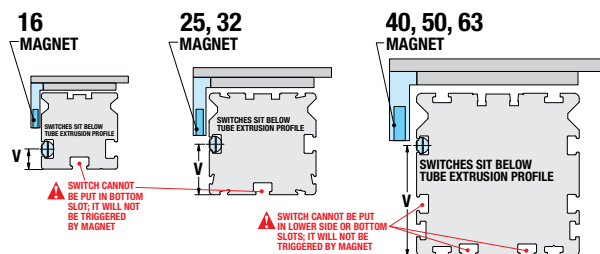


MXB-S

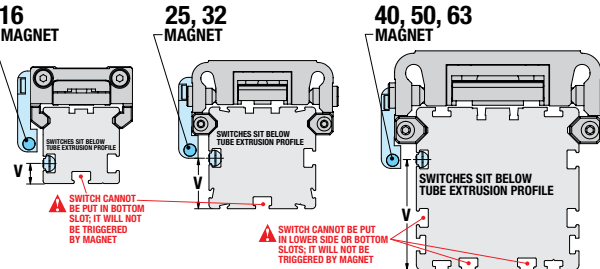

MXB-P

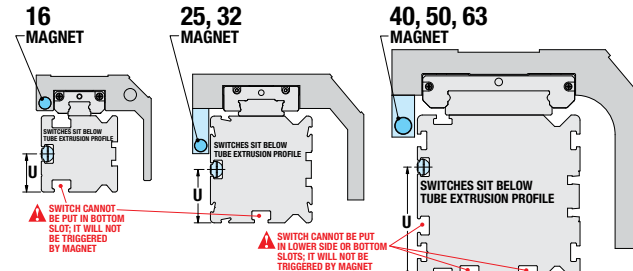

SWITCH DIMENSIONS

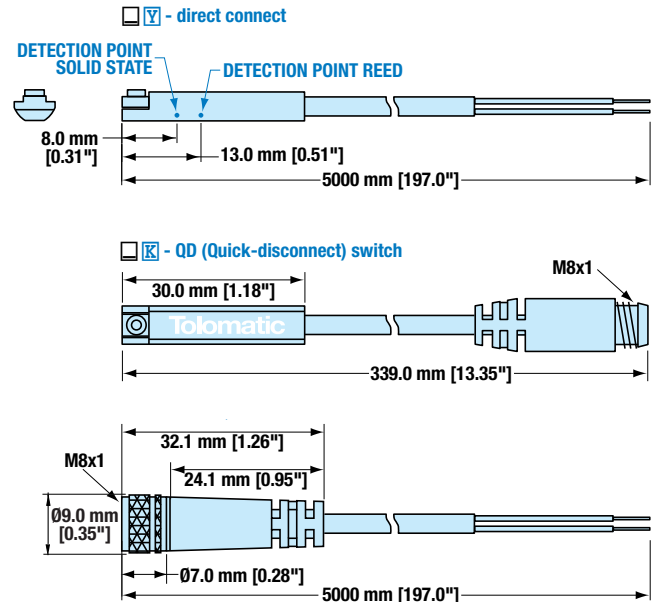







SWITCH MOUNTING

mm	MXB16	MXB25	MXB32	MXB40	MXB50	MXB63
U	15.0	21.0	27.7	43.5	51.4	62.0
V	7.9	20.0	27.0	43.5	51.4	62.0
in	MXB16	MXB25	MXB32	MXB40	MXB50	MXB63
U	0.59	0.83	1.09	1.71	2.02	2.44
V	0.31	0.79	1.06	1.71	2.02	2.44

NOTE: When ordering switches as a service part, Magnet Housing Kit (light blue in drawings) is required if actuator was not originally ordered with switches.

COMPILE APPLICATION REQUIREMENTS

ORIENTATION

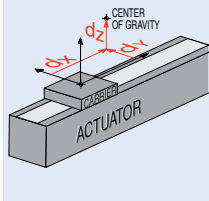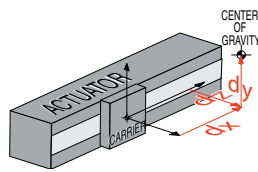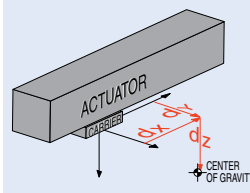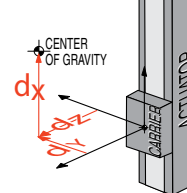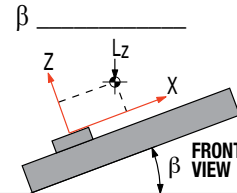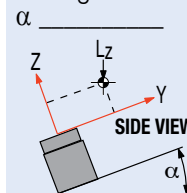☐ Horizontal

☐ Side

☐ Horizontal Down

☐ Vertical

☐ Angled °

☐ Load attached to carrier OR ☐ Load supported by other mechanism

DISTANCE FROM CENTER OF CARRIER TO LOAD CENTER OF GRAVITY

 d_x _____
 d_y _____
 d_z _____

☐ inch
 (U.S. Standard)

☐ millimeter
 (Metric)

STROKE LENGTH

☐ inch (S) (K)
 (U.S. Standard)

☐ millimeters
 (Metric)

NOTE: If load or force on carrier changes during cycle use the highest numbers for calculations

LOAD

☐ lb.
 (U.S. Standard)

☐ kg.
 (Metric)

THRUST REQUIRED

☐ lbf.
 (U.S. Standard)

☐ N
 (Metric)

 F_z _____
 F_y _____

BENDING MOMENTS APPLIED TO CARRIER

☐ in.-lbs.
 (U.S. Standard)

☐ N-m
 (Metric)

 M_x _____
 M_y _____
 M_z _____

PRECISION



Repeatability _____

☐ inch

☐ millimeters

OPERATING ENVIRONMENT

Temperature, Contamination, etc.

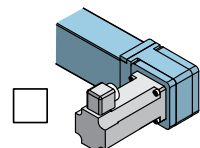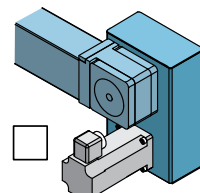
Direct Drive

Reduction Drive

MOVE PROFILE

Move Distance _____

☐ inch

☐ millimeters

Dwell Time After Move _____

☐ in/sec

☐ mm/sec

Max. Speed _____

☐ in/sec

☐ mm/sec

MOVE TIME


☐ sec

NO. OF CYCLES

☐ per minute

☐ per hour

MOTION PROFILE

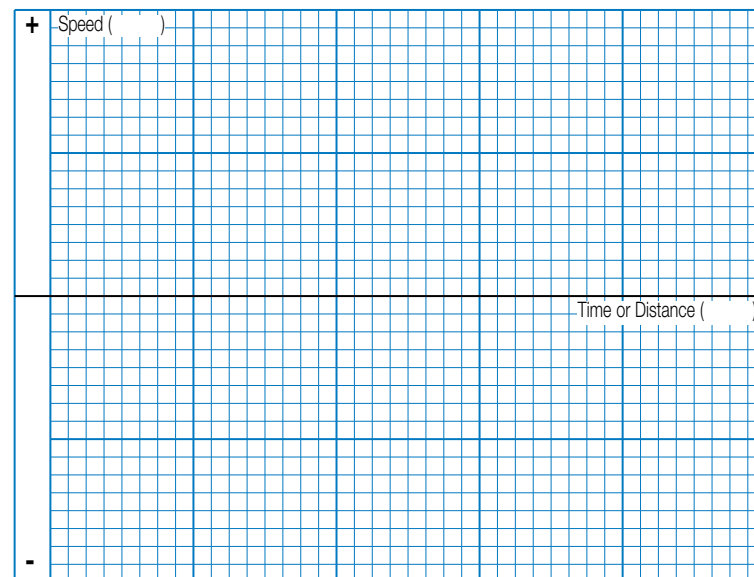

Graph your most demanding cycle, including accel/decel, velocity and dwell times. You may also want to indicate load variations and I/O changes during the cycle. Label axes with proper scale and units.

USE THE TOLOMATIC SIZING AND SELECTION SOFTWARE AVAILABLE ON-LINE AT
www.tolomatic.com OR... CALL TOLOMATIC 1-800-328-2174 with the above information. We will
 provide any assistance needed to determine the proper MX actuator for the job. **FAX 1-763-478-8080**

CONTACT INFORMATION

 Name, Phone, Email
 Co. Name, Etc.

SELECTION GUIDELINES

The process of selecting a belt drive actuator for a given application can be complex. **It is highly recommended that you contact Tolomatic or a Tolomatic distributor for assistance in selecting the best actuator for your application.** The following overview of the selection guidelines are for educational purposes only.

1 CHOOSE ACTUATOR SIZE

Choose an actuator that has the thrust, speed and moment load capacity to move the load.

- A) For maximum thrust use the table below.
- B) Max. speed of MXB-U 200 in/sec (5 m/sec); Max. speed of MXB-S 100 in/sec (2.5 m/sec) Max. speed of MXB-P 150 in/sec (3.8 m/sec).
- C) For MXB-S moment and load capacities see tables on page MXB_12. For MXB-P moment and load capacities see tables on page MXB_13.

SIZE	MAXIMUM THRUST	
	lbf	N
16	38	169
25	151	672
32	209	930
40	250	1112
50	325	1446
63	418	1859

2 COMPARE LOAD TO MAXIMUM LOAD CAPACITIES

Calculate the application load (combination of load mass and forces applied to the carrier) and application bending moments (sum of all moments M_x , M_y , and M_z applied to the carrier). Be sure to evaluate the magnitude of dynamic inertia moments. When a rigidly attached load mass is accelerated or decelerated, its inertia induces bending moments on the carrier. Careful attention to how the load is decelerated at the end of the stroke is required for improved actuator performance and application safety. If either load or any of the moments exceed figures indicated in the Moment and Load Capacity tables (page MXB_12 & 13) for the actuator consider:

- 1) A higher capacity carrier (ie. **S** to **P**)
- 2) A larger actuator size

3) Auxiliary carrier

- 4) External guide system (if the load is externally supported and guided, consider using MXB-U)

3 CALCULATE LOAD FACTOR (LF)

For loads with a center of gravity offset from the carrier account for both applied (static) and dynamic loads. The load factor (LF) must not exceed the value of 1.

$$L_f = \frac{M_x}{M_{x_{max}}} + \frac{M_y}{M_{y_{max}}} + \frac{M_z}{M_{z_{max}}} + \frac{F_y}{F_{y_{max}}} + \frac{F_z}{F_{z_{max}}} \leq 1$$


If L_f does exceed the value of 1, consider the four choices listed in step #2.

4 ESTABLISH YOUR MOTION PROFILE AND CALCULATE ACCELERATION RATE

Using the application stroke length and maximum carrier velocity (or time to complete the linear motion), establish the motion profile. Select either triangular (accel-decel) or trapezoidal (accel-constant speed-decel) profile. Now calculate the maximum acceleration and deceleration rates of the move. Acceleration/ deceleration should not exceed 1200 in/sec² (30.48 m/sec²). Also, do not exceed safe rates of dynamic inertia moments determined in step #3.

SPEED FACTOR

FOR APPLICATIONS WITH HIGH SPEED OR SIGNIFICANT SHOCK AND VIBRATION: Calculated values of loads and bending moments must be increased by speed factor from the graph below to obtain full rated life of profiled rail bearing system.

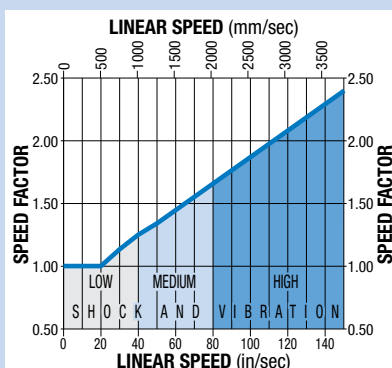

5 SELECT MOTOR (GEARHEAD IF NECESSARY) AND DRIVE

To help select a motor and drive, use the sizing equations located in the Engineering Resources section of the Tolomatic Electric Products Catalog (#3600-4609) to calculate the application thrust and torque requirements. Refer to Motor sections to determine the motor and drive.

6 DETERMINE MOUNTING PLATE REQUIREMENTS

- Consult the Mounting Plate Requirements graph for the model selected (page MXB_11)

- Cross reference the application load and maximum distance between supports


- Select the appropriate number of mounting plates

7 CONSIDER OPTIONS

- Choose metric or inch (U.S. standard) load mounting. When ordering use **S****I****N** for inch and **S****M** for metric.
- Switches - Reed, Solid State PNP or NPN, all available normally open or normally closed
- **FIL** Floating mount bracket - used when lack of parallelism occurs between the actuator and an externally guided and supported load (available for **S** Solid bearing style MXB actuators)

USE THE TOLOMATIC SIZING AND SELECTION SOFTWARE AVAILABLE ON-LINE AT www.tolomatic.com OR... CALL TOLOMATIC AT 1-800-328-2174. We will provide any assistance needed to determine the proper MX actuator for the job.

S SOLID BEARING 2:1 RULE

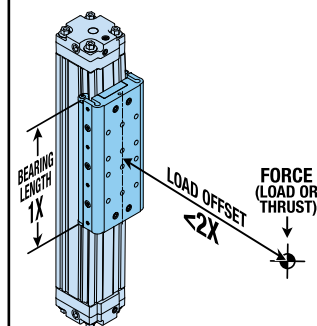

For applications using **S** solid bearings, binding or interrupted motion may occur if the load offset is equal to or greater than twice the bearing length (1X). LOAD OFFSET is defined as: the distance from the applied force (or the load center of gravity) to the centerline of the carrier.

If the load offset cannot be changed consider:

- 1.) Higher capacity bearing style, i.e. **S** to **P**
- 2.) Larger actuator size
- 3.) Auxiliary carrier
- 4.) Add external guides

MXB Rodless Belt Drive Actuators

SERVICE PARTS ORDERING

SWITCHES

Switches for MXB include retained mounting hardware and are the same for all actuator sizes and bearing styles

Code	Lead	Normally	Sensor Type
R Y	5m (197 in)	Open	Reed
R K	Quick-disconnect		
N Y	5m (197 in)	Closed	Reed
N K	Quick-disconnect		
T Y	5m (197 in)	Open	Solid State PNP
T K	Quick-disconnect		
K Y	5m (197 in)	Open	Solid State NPN
K K	Quick-disconnect		
P Y	5m (197 in)	Closed	Solid State PNP
P K	Quick-disconnect		
H Y	5m (197 in)	Closed	Solid State NPN
H K	Quick-disconnect		

NOTE: All switch kits include retained hardware. Quick-disconnect kits include female connector

⚠ NOTE: When ordering switches as service part, Magnet Housing Kit is required if actuator was not originally ordered with switches


To order switch kit use configuration code for switch preceded by SW and actuator code.

EXAMPLE: **SWMXB25KK**



The example is for Solid State NPN, Normally Open Switch with Quick-disconnect couplers. Each switch kit is complete with Bracket, Set Screw, Switch and mating QD cable. Note that the bracket/switch size is common and may be used on any size MXB.

Select a complete system from tolomatic **or** add any motion system to Tolomatic's actuators

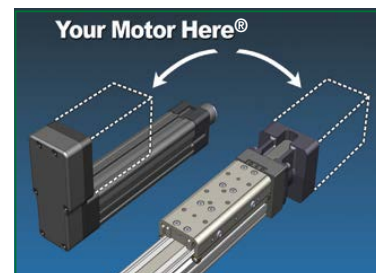

YOUR MOTOR HERE® MADE-TO-ORDER MOTOR MOUNTS.

- Tolomatic will provide a motor-specific interface for nearly any motor.

Visit www.tolomatic.com/ymh to find your motor/actuator match!

ACSI integrated motor / Drive / Controller



STANDARD FEATURES:

- Integrated servo motor/drive
- NEMA 23 & 34 frame sizes
- Mounted, configured, tuned & tested as an actuator system
- Dual Ethernet ports: EtherNet/IP™ & Modbus TCP

in Partnership with these manufacturers and others for more options



JVL
www.jvl.dk

Nidec
CONTROL TECHNIQUES

OPTIONS

MXB SIZE	Mounting Plate Kit	S (inch) Floating Mount Kit	S (metric) Floating Mount Kit	**MXB-U Magnet Housing Kit	**MXB-S Magnet Housing Kit	**MXB-P Magnet Housing Kit
16	8516-9030	8116-9536	8116-9036	8516-9024	8516-9074	8340-1008
25	8525-9030	8525-9536	8525-9136	8525-9024	8525-9074	8525-9009
32	8532-9030	8132-9536	8132-9036	8525-9024	8532-9074	8532-9009
40	8540-9030	8140-9536	8140-9036	8525-9024	8540-9074	8540-9009
50	8550-9030	8550-9536	8550-9036	8550-9024	8550-9074	8550-9009
63	8563-9030	8163-9536	8163-9036	8550-9024	8563-9074	8563-9009

***Magnet Housing Kit is required if actuator was not originally ordered with switches

Check out our **MX--S** carrier adjustment video on the web
<https://youtu.be/LVWPg2gfy0A>

MXB Rodless Belt Drive Actuators

ORDERING

MODEL SELECTION (MUST BE IN THIS ORDER)

MXB 40 P BWS30 SM2007-02

OPTIONS (IN ANY ORDER)

SDB DC215-9 MP8 HC2 TK2

MODEL

MXB MX Rodless Belt Drive Actuators

SERIES

16 Series actuator **40** Series actuator
25 Series actuator **50** Series actuator
32 Series actuator **63** Series actuator

BEARING

U Unguided Carrier
S Solid Bearing Carrier
P Profiled Rail Bearing Carrier

BELT MATERIAL AND WIDTH

BWS10 10 mm Urethane Steel (MXB16)
BWS18 18 mm Urethane Steel (MXB25)
BWS25 25 mm Urethane Steel (MXB32)
BWS30 30 mm Urethane Steel (MXB40)
BWS40 40 mm Urethane Steel (MXB50)
BWS50 50 mm Urethane Steel (MXB63)

STROKE LENGTH & MOUNTING TYPE

SK _____ Stroke, enter desired stroke length in **inches**
SM† _____ Stroke, enter desired stroke length in **millimeters**

GPB Blank Plate (MXB-U only)
 NO MOUNTING HOLES allowing user to drill and tap as needed

NOTE: Actuator mounting threads and mounting fasteners will be either inch or metric, depending on how stroke length is indicated

SK=inch mounting

SM= metric mounting

† The metric version provides metric tapped holes for mounting of the load to the carrier and of the actuator to mounting surfaces

U & S MOTOR MOUNTING/REDUCTION

(must choose one)

SDL, SDL* Direct Drive on Left

SDR, SDR* Direct Drive on Right

▲ A motor size and code must be selected when specifying a 3:1 reduction.
 (2:1 reduction on MXB16)

SDLT, SDLTD* 3:1 Reduction on Top Left

SDTR, SDTRD* 3:1 Reduction on Top Right

SDBL, SDBLD* 3:1 Reduction on Left Bottom

SDBR, SDBRD* 3:1 Reduction on Right Bottom

***For Dual Stub Shaft Option**

P MOTOR MOUNTING / REDUCTION

(must choose one)

SDT, SDTD* Direct Drive on Top

SDB, SDBD* Direct Drive on Bottom

▲ A motor size and code must be selected when specifying a 3:1 reduction.
 (2:1 reduction on MXB16)

SDLT, SDLTD* 3:1 Reduction on Left Top

SDRT, SDRTD* 3:1 Reduction on Right Top

SDLB, SDBLD* 3:1 Reduction on Left Bottom

SDRB, SDBRD* 3:1 Reduction on Right Bottom

***For Dual Stub Shaft Option**

AUXILIARY CARRIER

DC _____ Auxiliary Carrier, (MXB-P only)
 enter center-to-center spacing desired in **inches** (SK) or **millimeters** (SM)

(Same unit of measure as stroke length is required)

Center-to-center spacing between carriers

▲ adds to overall length of the actuator, this distance will not be subtracted from stroke length specified in the previous step

HEAD COVER PLATES

HC2 Head Cover Plates

MOUNTING

MP _ Mounting Plates, & quantity

TC _ Tube Clamps, & quantity

NOTE: The MXB requires Mounting Plates to allow clearance for motor when mounted flush to surface.

16,25,32 sizes use T-Nuts with Mounting Plates.

40,50,63 sizes use Tube Clamps with Mounting Plates.

P CARRIER ORIENTATION

BIR Mirrored Carrier Design

MOTOR / DRIVE / CONTROLLER / PLANETARY GEARBOX

▲ Reference the ordering pages in Tolomatic Electric Product Brochures Stepper Products Brochure #3600-4160 & Planetary Gearbox Doc. #3600-4161

SWITCHES

TYPE	LOGIC	NORMALLY	QUICK-DISCONNECT	CODE	QUANTITY	LEAD LENGTH
REED	SPST	Open	no	RY	After code enter quantity desired	5 meters (16.4 feet)
			QD	RK		
		Closed	no	NY		
			QD	NK		
SOLID STATE	PNP	Open	no	TY		
			QD	TK		
	NPN	Open	no	KY		
			QD	KK		
	PNP	Closed	no	PY		
			QD	PK		
	NPN	Closed	no	HY		
			QD	HK		

▲ Not all codes listed are compatible with all options.

Call Tolomatic 1-800-328-2174 to determine available options and accessories based on your application requirements.

VISIT www.tolomatic.com
 FOR COMPLETE, UP-TO-DATE INFORMATION



tolomatic.com/ask
 Technical support
 before and after
 purchase

The Tolomatic Difference Expect More From the Industry Leader:



INNOVATIVE PRODUCTS

Solutions with Endurance TechnologySM for challenging applications.



FAST DELIVERY

Built-to-order with configurable stroke lengths and flexible mounting options.



ACTUATOR SIZING

Size and select electric actuators with our online software.



YOUR MOTOR HERE[®]

Match your motor to compatible mounting plates with Tolomatic actuators.




CAD LIBRARY

Download 2D or 3D CAD files for Tolomatic products.



TECHNICAL SUPPORT

Get a question answered or request a virtual design consultation with one of our engineers.

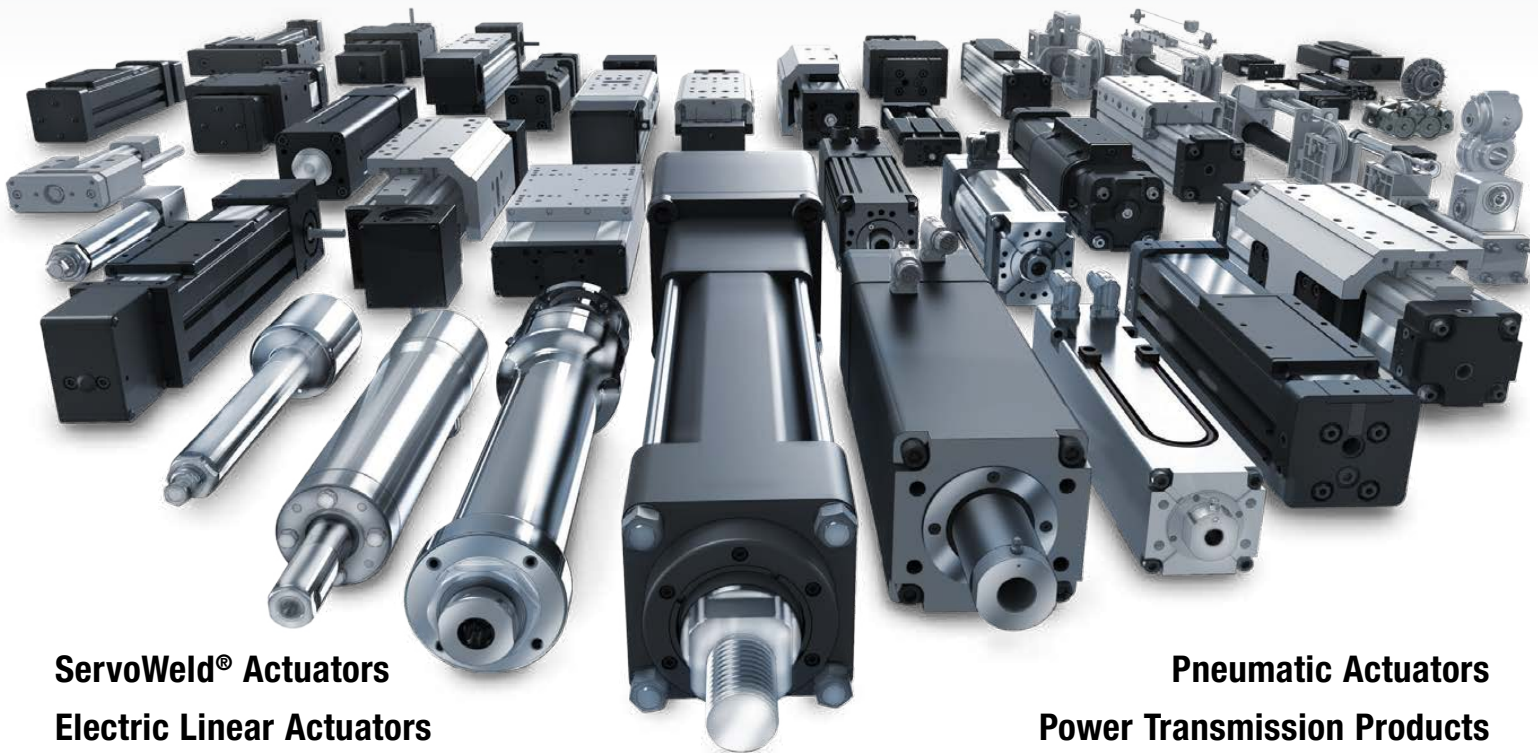

ServoWeld[®] Actuators
Electric Linear Actuators

Pneumatic Actuators
Power Transmission Products



MADE IN U.S.A.

TolomaticTM
EXCELLENCE IN MOTION

COMPANY WITH
QUALITY SYSTEM
CERTIFIED BY DNV
= ISO 9001 =
Certified site: Hamel, MN

USA - Headquarters

Tolomatic Inc.

3800 County Road 116
Hamel, MN 55340, USA
Phone: (763) 478-8000
Toll-Free: **1-800-328-2174**
sales@tolomatic.com
www.tolomatic.com

MEXICO

Centro de Servicio

Parque Tecnológico Innovación
Int. 23, Lateral Estatal 431,
Santiago de Querétaro,
El Marqués, México, C.P. 76246
Phone: +1 (763) 478-8000
help@tolomatic.com

EUROPE

Tolomatic Europe GmbH

Elisabethenstr. 20
65428 Rüsselsheim
Germany
Phone: +49 6142 17604-0
help@tolomatic.eu
www.tolomatic.com/de-de

CHINA

Tolomatic Automation Products (Suzhou) Co. Ltd.

No. 60 Chuangye Street, Building 2
Huqiu District, SND Suzhou
Jiangsu 215011 - P.R. China
Phone: +86 (512) 6750-8506
TolomaticChina@tolomatic.com

All brand and product names are trademarks or registered trademarks of their respective owners. Information in this document is believed accurate at time of printing. However, Tolomatic assumes no responsibility for its use or for any errors

that may appear in this document. Tolomatic reserves the right to change the design or operation of the equipment described herein and any associated motion products without notice. Information in this document is subject to change without notice.

Visit **www.tolomatic.com** for the most up-to-date technical information